



S.P. HELICOPTER SERVICE
GMBH

Part 145 Maintenance Organisation
EASA DE.145.0096

CAMO
DE.MG.315 AOC

Main & Tail gearbox repair and overhaul center



SCHWEIZER RSG SPARE PARTS LIST

Our technical team:

Mr. Christoph Lucas (German, English, French)

Mail: christoph.lucas@helicopter-service.de

Phone: +49 2644 5608 28

Mobile: +49 175 100 19 58

Mr. Burkard Noll

Mail: burkard.noll@helicopter-service.de

Phone: +49 2644 5608 43

Mr. Günter Laux (German, English)

Mail: guenter.laux@helicopter-service.de

Phone: +49 2644 5608 34

Pos.	P/N	Designation	Qty
1	66	LAMP 12V	10
2	107	RHEOSTAT	4
3	1474	VITON SEAL FV	6
4	1485	RING	2
5	1885	FITTING	1
6	5151	KNOB FV	5
7	7105	SWITCH	1
8	34265	LIGHT FV	1
9	60009	KEY	50
10	60096	GASKET FV	5
11	60768	PACKING FV	2
12	60828	PLUG FV	2
13	62817	SCREEN ASSEMBLY	1
14	77808	VALVE ASSEMBLY	1
15	99091	SPEEDI SLEEVE KIT	1
16	314639	BOLT	4
17	320559	SPLICE CONNECTOR	5
18	1514976	AC OIL TEMP. SENSOR FV	1
19	1514976	AC OIL TEMP. SENSOR FV	2
20	2973932	LAMP SOCKET FV	4
21	5654912	SENDER FV	7
22	# 3	RUBBER STOPPER - SOLID COMM GR FV	2
23	02-09-1119	MOLEX TERMINAL	2
24	03-09-1027	CONNECTOR	1
25	10.124.33	LOUVER W/BOX BEZEL CHROME FV	1
26	11-141	TERMINAL BLOCK	2
27	1N599	DIODE	3
28	1SX1T	MICRO SWITCH	2
29	1SX1T	MICRO SWITCH	5
30	202702-6-8S	REDUCER	2
31	20506A	DUAL OIL COOLER WITH VALVE FV	1
32	21-996-38	CONTROL CABLE FV	1
33	212-12D	RECEPTACLE	17
34	212-12D	RECEPTACLE	20
35	2200-12	AUTRONICS EPO WARNING UNIT FV	1
36	2600-2SW	FIXED WING STUD	5
37	2600-8	STUD	8
38	2600-8	STUD	1
39	2600-LW	WASHER	29
40	269A1103-003	Actuator	13
41	269A1103-003	ACTUATOR, MAGNETIC SWITCH	4
42	269A1115	Spacer	3
43	269A1185-001	BLADE ASSEMBLY, MAIN ROTOR FV	1
44	269A1185-001	BLADE ASSEMBLY, MAIN ROTOR FV	7
45	269A1185-1	M/R BLADE	1
46	269A1185-1	M/R BLADE	1
47	269A1185-1	M/R BLADE	1
48	269A1206	Sleeve	3
49	269A1206	SLEEVE	2
50	269A1207	Spacer	8
51	269A1207	SPACER, PITCH BEARING CASE	8
52	269A1208	Retainer	5
53	269A1208	RETAINER, M/R HUB	12

54	269A1209	Thrust Washer	4
55	269A1209	WASHER THRUST M/R	16
56	269A1214	Sleeve	48
57	269A1214	INNER BEARING SLEEVE	1
58	269A1214	SLEEVE, M/R INNER BEARING FV	12
59	269A1215	Washer	2
60	269A1215	SPACER, M/R HUB	14
61	269A1218	BUSHING PITCH BEARING FV	4
62	269A1218	BUSHING PITCH BEARING FV	2
63	269A1219-003	Sleeve Brg., inner	4
64	269A1219-003	SLEEVE-BEARING, INNER FV	19
65	269A1219-005	Sleeve Brg., inner	12
66	269A1219-005	Sleeve Brg., inner	2
67	269A1219-005	SLEEVE-BEARING, INNER FV	1
68	269A1219-3	SLEEVE BRG INNER	4
69	269A1219-5	SLEEVE BRG INNER	12
70	269A1220-009	HOUSING ASSY	1
71	269A1220-009	HOUSING ASSY	1
72	269A1220-113	CASE ASSY	1
73	269A1220-113	CASE ASSY	1
74	269A1220-113	CASE ASSY	1
75	269A1220-113	CASE ASSY	1
76	269A1220-113	CASE ASSY	1
77	269A1220-113	CASE ASSY	1
78	269A1223	Spring	152
79	269A1223	SPRING, M/R DAMPER	6
80	269A1223	SPRING, DAMPER, MAIN ROTOR	11
81	269A1223	SPRING, DAMPER, MAIN ROTOR	3
82	269A1224	SPACER, DAMPER, MAIN ROTOR	1
83	269A1225	Retainer, Damper M/R	9
84	269A1225	RETAINER, DAMPER, MAIN ROTOR	11
85	269A1227-015	BUSHING, PITCH BEARING CASE	3
86	269A1227-017	Flanged Bushing	1
87	269A1227-017	BUSHING, PITCH BEARING	4
88	269A1227-017	BUSHING FV	1
89	269A1227-817	BUSHING, PITCH BEARING KIT	2
90	269A1227-819	BUSHING PITCH BEARING KIT FV	1
91	269A1228-003	Plate	24
92	269A1228-003	WASHER, M/R HUB ATTACH	9
93	269A1228-005	Plate	5
94	269A1228-005	WASHER PLATE	7
95	269A1228-005	WASHER, MAIN ROTOR HUB ATTACH	4
96	269A1228-007	WASHER, MAIN ROTOR HUB ATTACH	3
97	269A1228-009	WASHER, M/R HUB ATTACH	4
98	269A1228-009	WASHER, MAIN ROTOR HUB ATTACH	4
99	269A1229	BOLT M/R HUB	1
100	269A1229-001	BOLT M/R HUB	3
101	269A1229-001	BOLT-MAIN ROTOR HUB ATTACHING	1
102	269A1230	Retainer Washer	13
103	269A1230	WASHER / RETAINER	13
104	269A1230	RETAINER	15
105	269A1231	BEARING M/R PITCH	1
106	269A1231	BEARING M/R PITCH	1
107	269A1231	BEARING M/R PITCH	1

108	269A1231	BEARING M/R PITCH	1
109	269A1231	BEARING M/R PITCH	1
110	269A1231	BEARING SET, PITCH BEARING CASE	8
111	269A1232	Bolt	17
112	269A1232	BOLT, MAIN ROTOR HUB ATTACH M OVERSIZE	12
113	269A1232-001	BOLT, MAIN ROTOR HUB ATTACH	2
114	269A1232-003	BOLT M/R HUB ATTACH	1
115	269A1232-003	BOLT MAIN ROTOR HUB ATTACH M2 OVERSIZE	6
116	269A1240	SHAFT ASSEMBLY, M/R PITCH BEARING FV	1
117	269A1240	SHAFT ASSEMBLY, M/R PITCH BEARING FV	3
118	269A1240-007	SHAFT ASSY, M/R PITCH	1
119	269A1240-007	SHAFT ASSY, M/R PITCH	1
120	269A1240-007	SHAFT ASSY, M/R PITCH	1
121	269A1240-007	SHAFT ASSY, M/R PITCH	1
122	269A1240-007	SHAFT ASSY, M/R PITCH	1
123	269A1240-007	SHAFT ASSY, M/R PITCH	1
124	269A1240-007	SHAFT ASSEMBLY, M/R PITCH BEARING FV	14
125	269A1245	Cap	17
126	269A1245	CAP, PITCH BEARING	3
127	269A1245	CAP, PITCH BEARING FV	6
128	269A1245	CAP, PITCH BEARING FV	1
129	269A1252-005	Plate, M/R Damper	59
130	269A1252-005	PLATE, M/R BLADE DAMPER FV	2
131	269A1252-007	Plate	301
132	269A1252-007	PLATE, M/R BLADE DAMPER FV	2
133	269A1252-009	Plate	82
134	269A1252-009	PLATE, M/R BLADE DAMPER FV	2
135	269A1253	Plate	30
136	269A1253	DISC, M/R BLADE DAMPER FV	10
137	269A1256	Bearing	16
138	269A1256	BEARING, M/R BLADE DAMPER FV	6
139	269A1257	Bearing	39
140	269A1257	BEARING, M/R BLADE DAMPER FV	8
141	269A1261	SLEEVE, M/R BLADE	4
142	269A1262	Bolt	4
143	269A1262	BOLT, M/R BLADE LINK	6
144	269A1263	Spring Washer	106
145	269A1263	WASHER	18
146	269A1263	WASHER, T/R ASSEMBLY	7
147	269A1263	WASHER, T/R ASSEMBLY	12
148	269A1266	Bolt	13
149	269A1267	Plate	8
150	269A1267	PLATE, M/R BLADE DAMPER	3
151	269A1268	Shaft Assy	12
152	269A1268	SHAFT ASSEMBLY, M/R DAMPER FV	3
153	269A1268	SHAFT ASSEMBLY, M/R DAMPER FV	8
154	269A1270	Plate	4
155	269A1270	PLATE, M/R BLADE DAMPER	3
156	269A1271	Plate	104
157	269A1271	PLATE ASSEMBLY, M/R BLADE DAMPER FV	1
158	269A1274	Bushing M/R Blade Damper	52
159	269A1274	BUSHING, M/R BLADE DAMPER	2
160	269A1274	BUSHING, M/R BLADE DAMPER	12
161	269A1277-003	Spacer	44

162	269A1277-005	Spacer	6
163	269A1278	Seal	49
164	269A1282	Arm Assy	48
165	269A1282	ARM ASSEMBLY, M/R BLADE DAMPER FV	1
166	269A1290-003	M/R DAMPER	1
167	269A1290-003	M/R DAMPER	1
168	269A1290-003	M/R DAMPER	1
169	269A1290-003	DAMPER ASSY, M/R BLADE ELASTOMERIC FV	3
170	269A1290-003	DAMPER ASSY, M/R BLADE ELASTOMERIC FV	3
171	269A1291	Fitting	7
172	269A1291	FITTING ASSEMBLY, M/R BLADE FV	2
173	269A1301	Bearing	1
174	269A1301	Bearing	1
175	269A1301	BEARING ASSY	1
176	269A1301	BEARING ASSY	1
177	269A1301	BEARING ASSEMBLY	1
178	269A1301-003	Seal	1
179	269A1301-3	SEAL, M/R	2
180	269A1301-5	SNAP RING, M/R	4
181	269A1307	Seal	7
182	269A1307	SEAL, MAIN ROTOR FV	7
183	269A1307-003	SEAL, M/R BEARING	2
184	269A1307-003	SEAL, M/R BEARING FV	1
185	269A1308	GASKET	2
186	269A1308	WASHER - MAIN ROTOR SHAFT	3
187	269A1308-003	WASHER, LOCKNUT, M/R	3
188	269A1308-003	WASHER, LOCKNUT, M/R DRIVE SHAFT	19
189	269A1308-003	WASHER, LOCKNUT, M/R DRIVE SHAFT	1
190	269A1310-005	BOOT M/R	1
191	269A1310-005	BOOT, SWASHPLATE GUIDE TUBE, TOP FV	2
192	269A1311	ARM, SWASHPLATE	1
193	269A1311-1	Arm	1
194	269A1311-801	ARM ASSY	2
195	269A1312	BEARING, M/R ARM SWASHPLATE BRONZE	72
196	269A1312	BEARING, M/R ARM SWASHPLATE FV	17
197	269A1312	BEARING, M/R ARM SWASHPLATE FV	4
198	269A1315	Nut	3
199	269A1315	NUT, M/R THRUST BEARING	1
200	269A1317-003	TUBE, M/R THRUST BEARING FV	2
201	269A1317-3	Tube Assy	2
202	269A1318-005	TUBE, M/R THRUST BEARING	2
203	269A1320	Plate	5
204	269A1320	PLATE, DROOP STOP RETAINER	1
205	269A1320	PLATE, DROPP STOP RETAINER	1
206	269A1320	PLATE, DROOP STOP RETAINER	1
207	269A1323	BUSHING, M/R LINK AND ARM STEEL	52
208	269A1323	BUSHING, M/R LINK AND ARM FV	2
209	269A1323-005	BUSHING, M/R LINK AND ARM STEEL	14
210	269A1323-005	BUSHING M/R SWASH PLT SCISSORS FV	20
211	269A1324	LINER, SWASHPLATE SLEEVE	8
212	269A1324	LINER, SWASHPLATE SLEEVE ASSEMBLY FV	2
213	269A1328	Support Assy	9
214	269A1328-025	SUPPORT ASSY	4
215	269A1329	RING, DROOP STOP RETAINER	1

216	269A1329	RING, DROOP STOP RETAINER FV	2
217	269A1330-009	LOWER SWASHPLATE	1
218	269A1330-009	PLATE, M/R LOWER SWASHPLATE FV	1
219	269A1331	SWASHPLATE M/R UPR	1
220	269A1331	PLATE, M/R SWASHPLATE FV	1
221	269A1331	PLATE, M/R SWASHPLATE FV	1
222	269A1331-005	SWASHPLATE M/R UPR	1
223	269A1332	Retainer Droop Stop	7
224	269A1332	RETAINER	4
225	269A1332	RETAINER, DROOP STOP	1
226	269A1333-005	Swashplate, kompl.	3
227	269A1333-3	PLATE ASSY	1
228	269A1335-007	LINK, M/R ARM	1
229	269A1335-007	Link Assy	3
230	269A1335-007	LINK, M/R ARM	2
231	269A1336	Link Assy	11
232	269A1336	LINK, M/R ARM	1
233	269A1337	SLEEVE, MAIN ROTOR FV	1
234	269A1338	Rod Assy	6
235	269A1338-003	Rod	5
236	269A1338-003	ROD, M/R PITCH	6
237	269A1339	Sleeve Assy	3
238	269A1339	SLEEVE, ROTOR SHAFT	3
239	269A1340	Nut Droop stop	14
240	269A1340-003	NUT DROOP STOP RING RETAINER	3
241	269A1340-3	NUT	8
242	269A1341	Deflector	1
243	269A1354	Bolt, Flapping Hinge	29
244	269A1354	BOLT SPEC M/R HUB	7
245	269A1355	Nut	19
246	269A1355	NUT SPEC M/R HUB	3
247	269A1355	NUT, SPECIAL, M/R HUB	3
248	269A1355	NUT, SPECIAL, M/R HUB	1
249	269A1356	Washer	8
250	269A1356	WASHER, MAIN ROTOR	43
251	269A1356	WASHER, MAIN ROTOR	10
252	269A1356-003	Washer	4
253	269A1356-003	WASHER, M/R	15
254	269A1360-001	RETAINER, M/R	1
255	269A1927-005	M/R Damper	6
256	269A1928	Spacer	13
257	269A1929	Shim	40
258	269A1929	SHIM, M/R BLADE DAMPER	10
259	269A2010-005T	MAST M/R	1
260	269A2015-009	STRUT ASSEMBLY FV	2
261	269A2015-013	STRUT ASSY	1
262	269A2015-013	STRUT ASSY	1
263	269A2015-013	STRUT ASSY	1
264	269A2015-013	STRUT ASSY	1
265	269A2015-013	STRUT ASSY FV	2
266	269A2017-005	Fitting Frame	1
267	269A2017-005	Fitting Frame	2
268	269A2017-005	FITTING	2
269	269A2025-001	FITTING TAIL BOOM SUPPORT STRUT	6

270	269A2090-903	SEAL DOOR	2
271	269A2090-903	SEAL, DOOR FV	10
272	269A2126L	BEAM, CABIN FLOOR	1
273	269A2148-003N	BEAM-SEAT BK.STRUCT. FV	1
274	269A2170	Tube Assy	3
275	269A2170	TUBE ASSEMBLY, MAST SUPPORT	2
276	269A2171	Tube Assy	2
277	269A2171	TUBE ASSEMBLY, MAST SUPPORT	2
278	269A2172-005	TUBE ASSY, MAST SUPPORT AFT	3
279	269A2212	CONTROL ASSY	1
280	269A2216-017	CANOPY SLAT ASSEMBLY FV	1
281	269A2218	STRUT ASSY, TAIL BOOM	2
282	269A2225-003	FILLER, FUSELAGE, LEFT-HAND FV	1
283	269A2225-004	FILLER, FUSELAGE, RIGHT-HAND FV	1
284	269A2232L	FITTING, FUSELAGE	1
285	269A2235-803	FITTING R/H FUSE FRM	2
286	269A2239-003	TUBE	1
287	269A2239-005	TUBE	2
288	269A2239-005	TUBE, FUSELAGE FV	1
289	269A2239-005	TUBE, FUSELAGE FV	1
290	269A2239-009	TUBE, FUSELAGE FV	1
291	269A2239-009	TUBE, FUSELAGE FV	1
292	269A2239-011	TUBE	2
293	269A2239-011	TUBE, FUSELAGE FV	1
294	269A2239-013	TUBE	1
295	269A2239-013	TUBE, FUSELAGE FV	1
296	269A2239-015	TUBE	1
297	269A2239-017	TUBE, FUSELAGE FV	1
298	269A2239-019	TUBE	1
299	269A2239-019	TUBE, FUSELAGE FV	1
300	269A2239-025	TUBE	1
301	269A2239-027	TUBE	1
302	269A2239-047	TUBE, FUSELAGE FV	1
303	269A2244	Strut Assy	2
304	269A2244L	STRUT ASSEMBLY	1
305	269A2244L	STRUT ASSEMBLY FV	1
306	269A2244L	STRUT ASSEMBLY FV	1
307	269A2246-001	STRUT, CABIN FLOOR	3
308	269A2246-001	STRUT ASSEMBLY FV	1
309	269A2246-002	CABIN FLOOR STRUT	3
310	269A2246-002	STRUT ASSEMBLY FV	1
311	269A2246-1	Strut	2
312	269A2246-2	Strut	4
313	269A2255	BRACE, CANOPY SLAT	3
314	269A2259-009	CABIN FRAME	2
315	269A2262-003	DOUBLER	2
316	269A2262-3	Doubler	1
317	269A2262-4	Doubler	1
318	269A2264	Fitting	5
319	269A2264-013	Fitting	2
320	269A2264-013	FITTING	3
321	269A2265-003	Frame	1
322	269A2265-003L	Frame	1
323	269A2265-003L	FRAME, CANOPY	1

324	269A2265-003L	FRAME, CANOPY	1
325	269A2265-004L	Frame	1
326	269A2265-004L	FRAME, CANOPY	2
327	269A2265-005	FRAME, CANOPY FV	1
328	269A2265-005L	Frame	1
329	269A2265-005L	FRAME, CANOPY	2
330	269A2265-006	FRAME, CANOPY FV	2
331	269A2265-006L	Frame	1
332	269A2265-006L	FRAME, CANOPY	2
333	269A2265-007 D	Frame	1
334	269A2265-007L	Frame	1
335	269A2265-007L	FRAME, CANOPY	3
336	269A2265-009	FRAME, CANOPY FV	1
337	269A2265-009L	Frame	1
338	269A2265-009L	FRAME, CANOPY	3
339	269A2265-011L	FRAME, CANOPY	3
340	269A2265-11D	Frame	1
341	269A2265-4D	Frame	1
342	269A2265-5D	Frame	1
343	269A2265-6D	Frame	1
344	269A2265-9D	Frame	1
345	269A2267	Clip	4
346	269A2267L	CLIP, CANOPY	4
347	269A2268	CLIP, CANOPY FV	1
348	269A2269-003	Angle	1
349	269A2269-004	Angle	1
350	269A2269-004L	ANGLE, CANOPY	1
351	269A2271-003	Clip L/H	1
352	269A2271-003	CLIP, CANOPY FV	2
353	269A2271-003L	CLIP, CANOPY	2
354	269A2271-004	Clip R/H	1
355	269A2271-004	CLIP, CANOPY FV	2
356	269A2271-004L	CLIP, CANOPY	2
357	269A2272-001T	FRAME, DOOR L/H	1
358	269A2272-008	FRAME DOOR R/H FV	1
359	269A2272-008T	PANEL, CABIN DOOR R/H	3
360	269A2272-8L	Door Frame	1
361	269A2276-021T	FAIRING ASSY	2
362	269A2276-021T	FAIRING ASSEMBLY FV	2
363	269A2277-003L	HOUSING, LEFT HAND FV	1
364	269A2277-004L	HOUSING, RIGHT HAND FV	1
365	269A2280-024	Door Assy	1
366	269A2288-003	Striker	138
367	269A2288-003L	STRIKER, LATCH	6
368	269A2289	SPRING	10
369	269A2289	SPRING, DOOR LATCH	21
370	269A2289	SPRING, DOOR LATCH	1
371	269A2291L	DOUBLER	1
372	269A2293L	HINGE LATCH, HALF	9
373	269A2293N	HINGE, CABIN LATCH FV	5
374	269A2293N	HINGE, CABIN LATCH FV	1
375	269A2294	Handle	8
376	269A2296	SUPPORT, CANOPY FV	2
377	269A2296-003L	SUPPORT, CANOPY SLAT FV	1

378	269A2303-007	Clamp	3
379	269A2303-009	Bracket L/H	34
380	269A2303-009	BRACKET, LEFT-HAND FV	4
381	269A2303-011	Bracket R/H	27
382	269A2303-011	BRACKET, RIGHT-HAND FV	4
383	269A2303-013D	Bracket L/H	9
384	269A2303-014	Bracket R/H	3
385	269A2303-017	Bracket	28
386	269A2303-019	Fairing	8
387	269A2303-019	Fairing	5
388	269A2303-020	Fairing	4
389	269A2303-020	Fairing	9
390	269A2303-023	Clamp Assy	17
391	269A2305	Tail Skid	2
392	269A2305-009	SKID ASSY, TAIL	2
393	269A2305-009	SKID ASSEMBLY, TAIL FV	2
394	269A2308	Guide Assy	9
395	269A2308	Guide Assy	2
396	269A2308-009	GUIDE ASSY, T/R CONTROL ROD FV	2
397	269A2308-013L	GUIDE, TAILBOOM FV	1
398	269A2309	Grommet	18
399	269A2309	GROMMET	6
400	269A2309	GROMMET FV	3
401	269A2309	GROMMET FV	1
402	269A2311-003	GUIDE, DOOR STOP	9
403	269A2311-003	GUIDE, DOOR STOP FV	8
404	269A2312	Plate	4
405	269A2319	Handle Door Latch	6
406	269A2319	Handle Door Latch	1
407	269A2319	HANDLE, DOOR LATCH	7
408	269A2320-017	TAILBOOM ASSY, PAINTED WHITE FV	2
409	269A2320-021	TAIL BOOM	1
410	269A2320-021	TAIL BOOM	1
411	269A2320-021	TAILBOOM ASSY, PAINTED WHITE FV	1
412	269A2321-007	Bulkhead Assy	1
413	269A2324-011	Fitting	2
414	269A2325	Bracket	2
415	269A2329-161	CHANNEL CENTER	1
416	269A2329-169	RETAINER R/H	1
417	269A2329-175	Retainer	1
418	269A2329-175	RETAINER L/H	1
419	269A2330-003	DAMPER ASSY TAIL BOOM	1
420	269A2330-003	DAMPER ASSEMBLY, TAILBOOM FV	1
421	269A2330-003	DAMPER ASSEMBLY, TAILBOOM FV	1
422	269A2330-005	DAMPER ASSY TAIL BOOM	1
423	269A2331	BLOCK DAMPER, TAILBOOM	4
424	269A2331	BLOCK DAMPER, TAILBOOM (C) FV	3
425	269A2331	BLOCK DAMPER, TAILBOOM (C) FV	1
426	269A2332	Support Assy	1
427	269A2332	SUPPORT ASSEMBLY, TAILBOOM FV	2
428	269A2332-009	SUPPORT ASSY - DAMPER T/R DRV SHFT FV	1
429	269A2333	Plate	1
430	269A2333	PLATE, TAILBOOM FV	2
431	269A2334	Plate	6

432	269A2334	Plate	1
433	269A2334-011	Plate	1
434	269A2335	Plate	19
435	269A2335	DAMPER PLT. TAIL ROTOR DRIVE SHAFT	8
436	269A2337-009	SUPPORT ASSY WELD	3
437	269A2337-027	SUPPORT ASSY, T.L. DOORS	2
438	269A2337-039	SUPPORT PAINTED	2
439	269A2339-013	WIRE, T.L. DOORS	5
440	269A2340-001	HANDLE ASSY L/H WELD	2
441	269A2340-002	HANDLE ASSY R/H	2
442	269A2341-001	HANDLE ASSY	2
443	269A2345-017	BRACKET V	2
444	269A2402	STABILIZER, VERTICAL FV	1
445	269A2416-1	Fitting Assy L/H	1
446	269A2416-2	Fitting Assy R/H	1
447	269A2419-003	STABILIZER, VERTICAL	1
448	269A2419-003	STABILIZER, VERTICAL	1
449	269A2419-003	STABILIZER, VERTICAL	1
450	269A2419-003	STABILIZER, VERTICAL FV	1
451	269A2514-003	Doubler Horiz. Stab.	10
452	269A2515	Fitting	16
453	269A2515	Fitting	1
454	269A2516-003	Plate	31
455	269A2516-021	STABILIZER, HORIZONTAL	1
456	269A2516-021	STABILIZER, HORIZONTAL	1
457	269A2516-021	HORIZ STABILIZER ASSY FV	1
458	269A2521	FITTING, HORIZONTAL STABILIZER FV	2
459	269A2523-003L	BRACKET, HORIZONTAL STABILIZER FV	3
460	269A2523-003L	BRACKET, HORIZONTAL STABILIZER FV	4
461	269A2804-043	DOOR GLASS PANEL ASS'Y L/H 269C MDL FV	1
462	269A2804-044	DOOR GLASS PANEL ASS'Y R/H 269C MDL FV	1
463	269A3108	BOOT, LD GEAR DAMP	8
464	269A3108	BOOT, LANDING-GEAR DAMPER FV	19
465	269A3111	D NUT,L/G DAMPER	5
466	269A3115	LG Strut	11
467	269A3115	FORK, LD GEAR	5
468	269A3115	FORK, LANDING-GEAR FV	6
469	269A3117-007	CROSSBEAM ASSEMBLY, AFT FV	2
470	269A3118-009	CROSSBEAM ASSY, FWD	1
471	269A3118-009	CROSSBEAM ASSEMBLY, FORWARD FV	1
472	269A3118-9	Strut	4
473	269A3119	STRUT ASSY, LD-GEAR	3
474	269A3119	STRUT ASSEMBLY, LANDING-GEAR FV	2
475	269A3120-005L	STRUT LDG, AFT, L/H	2
476	269A3120-006L	STRUT ASSY R/H	1
477	269A3120-006L	STRUT ASSEMBLY, RIGHT-HAND, REAR FV	1
478	269A3120-007L	STRUT ASSY, L/H	1
479	269A3120-008L	STRUT ASSY, R/H	1
480	269A3120-008L	STRUT ASSEMBLY, RIGHT-HAND, FORWARD FV	1
481	269A3120-5	Strut	1
482	269A3120-6	Strut	9
483	269A3120-7	Strut	3
484	269A3120-8	Strut	1
485	269A3150-005	Damper Assy	1

486	269A3150-019	DAMPER ASSEMBLY, LANDING-GEAR FWD FV	3
487	269A3150-021	DAMPER ASSEMBLY, LANDING-GEAR AFT FV	1
488	269A3150-800	KIT, DAMPER OH	3
489	269A3150-801	DAMPER OVERHAUL KIT	3
490	269A3150-802	LANDING GEAR DAMPER OVERHAUL KIT FV	2
491	269A3150-9	Damper	2
492	269A3150-9	Damper	2
493	269A3150-9	Damper	2
494	269A3150-9	Damper	2
495	269A3150-9	Damper	2
496	269A3150-9	Damper	2
497	269A3150-9	Damper	2
498	269A3150-9	Damper	2
499	269A3150-9	Damper	2
500	269A3150-9	Damper	2
501	269A3150-9	Damper	2
502	269A3150-9	Damper	1
503	269A3150-9	Damper	1
504	269A3152	Cap LDG. Damper	3
505	269A3152	Upper Cap	2
506	269A3152	CAP ASSY, LDG GEAR DAMPER	4
507	269A3154	Cap Lower	1
508	269A3154	CAP, LDG DAMPER LOWER	4
509	269A3155	Plug	25
510	269A3155	PLUG, LANDING-GEAR DAMPER FV	8
511	269A3156-003	HOUSING ASSEMBLY, POPPET FV	3
512	269A3156-003	HOUSING ASSEMBLY, POPPET FV	2
513	269A3156-3	Housing	2
514	269A3158	Poppet	15
515	269A3159	Poppet	32
516	269A3161	Spring	9
517	269A3162-003	Piston	2
518	269A3162-003	Piston	11
519	269A3162-003	PISTON, LANDING-GEAR FV	1
520	269A3162-005	PISTON DAMPER, L/G	7
521	269A3162-005	PISTON, LANDING-GEAR FV	2
522	269A3163-013	BARREL ASSY	1
523	269A3163-013	BARREL ASSY FV	3
524	269A3166	Washer	52
525	269A3166	WASHER	8
526	269A3167	Baffle	9
527	269A3167-003	BAFFLE, LDG	4
528	269A3167-003	BAFFLE	1
529	269A3168	Spring	11
530	269A3168	Spring	11
531	269A3168	SPRING, LANDING-GEAR DAMPER	5
532	269A3169-001	PLATE	3
533	269A3169-001	PLATE, LANDING-GEAR DAMPER	10
534	269A3170	Cap	1
535	269A3170	CAP, LDG DAMPER	3
536	269A3202-011	LANYARD ASSY	2
537	269A3213	Plug	3
538	269A3213	PLUG, SKID FV	2
539	269A3224	Shaft Assy	6

540	269A3224	Shaft Assy	2
541	269A3224	SHAFT, WHEEL ASSEMBLY FV	4
542	269A3226	Cap	1
543	269A3226	CAP, SKID	2
544	269A3227	Bushing	3
545	269A3227	BUSHING, SKID	1
546	269A3228-003	CAP, SKID	4
547	269A3228-003	CAP SKID TUBE END FV	4
548	269A3229-003	EXTENSION, SKID, LEFT HAND FV	1
549	269A3229-005L	EXTENSION L/H	1
550	269A3229-005L	EXTENSION, SKID, LEFT-HAND FV	3
551	269A3229-006	EXTENSION R/H	1
552	269A3229-006L	EXTENSION, SKID, RIGHT-HAND FV	4
553	269A3230-001L	SLEEVE, SKID, L/H	3
554	269A3230-002	Sleeve R/H	1
555	269A3230-002L	SLEEVE	2
556	269A3231L	Sleeve	3
557	269A3231L	SLEEVE, SKID	2
558	269A3232	Cap	10
559	269A3232	CAP, 1.75", SKID FV	2
560	269A3232-003	Cap	11
561	269A3234	Skid Shoe	20
562	269A3238-011	Filler	7
563	269A3238-011	FILLER, LDG	2
564	269A3238-011	FILLER, LANDING-GEAR	3
565	269A3238-013	TAPE, NON-SKID	19
566	269A3238-015	STABILIZER ASSEMBLY, L/H L/G FV	1
567	269A3238-015T	STABILIZER ASSEMBLY, L/H LDG	2
568	269A3238-016U	STABILIZER ASSEMBLY, R/H LDG	2
569	269A3238-016U	STABILIZER ASSEMBLY, R/H L/G FV	1
570	269A3238-15	Stabilizer Assy, LH	6
571	269A3245-917	SKID ASSY L/H	1
572	269A3245-918	SKID ASSY R/H	1
573	269A3248	Clip	33
574	269A3251-001	SKID SHOE	2
575	269A3251-003	SHOE SKID SHWAYDER (SHORT) FV	1
576	269A3251-015	SKID SHOE NOSE	2
577	269A4008	Fairlead	3
578	269A4008	FAIRLEAD FV	2
579	269A4019-019	SCUFF PLATE, CARPET L/H	1
580	269A4019-019	SCUFF PLATE, CARPET L/H	1
581	269A4019-020	SCUFF PLATE R/H	1
582	269A4022	Spacer Gen. Bracket	14
583	269A4022	SPACER FV	2
584	269A4024-001	Fairlead	14
585	269A4024-001	FAIRLEAD ASSEMBLY, CABIN FLOOR FV	5
586	269A4029-005	Cover Assy	9
587	269A4030-003	Boot, Rubber Pedal	9
588	269A4030-003	BOOT, PEDAL ARM	6
589	269A4030-003	BOOT, PEDAL ARM FV	6
590	269A4031-003	Boot	10
591	269A4031-003	BOOT, COLLECTIVE STICK FV	1
592	269A4031-005	Boot	8
593	269A4031-005	BOOT, SEAT BACK LOWER CABIN	2

594	269A4031-007	Boot	14
595	269A4031-007	BOOT, SEAT BACK (CONTROLS) FV	2
596	269A4031-009	Boot	11
597	269A4031-009	BOOT, SEAT BACK UPPER	2
598	269A4037	Boot	35
599	269A4037	BOOT, OIL SWITCH	2
600	269A4037	BOOT, OIL SWITCH FV	2
601	269A4043-005	CENTER SEAT MOLDING FV	1
602	269A4044-003	SUPPORT, CUSHION L/H FV	1
603	269A4061-800	CARPET FLOOR RED	2
604	269A4090-001	FUEL PUMP	1
605	269A4090-001	FUEL PUMP - AUXILIARY NOISE FILTER 24 V FV	1
606	269A4093-807	BATTERY BRACKET INST'L SPARES ONLY	1
607	269A4106	Instr. Cluster	7
608	269A4106	Cluster Instrument	3
609	269A4106	Cluster Instrument	3
610	269A4106	Cluster Instrument	3
611	269A4106	Cluster Instrument	3
612	269A4106	Cluster Instrument	2
613	269A4106	Instr. Cluster	5
614	269A4106	INSTRUMENT CLUSTER	2
615	269A4106	INSTRUMENT CLUSTER FV	1
616	269A4106-003	INSTRUMENT CLUSTER FV	1
617	269A4106-501	3-PACK, 12-VOLT, C MODEL FV	4
618	269A4107	Cluster Instrument	3
619	269A4107	Cluster Instrument	3
620	269A4107	Instr. Cluster	4
621	269A4107-501	3-PACK, 12-VOLT, C MODEL FV	3
622	269A4107-605	INSTRUMENT CLUSTER	1
623	269A4107-609	INSTRUMENT CLUSTER	1
624	269A4107-613	INSTRUMENT CLUSTER	1
625	269A4111-007	Instr. Cluster	1
626	269A4113	Relay	1
627	269A4113	RELAY, 12-VOLT	1
628	269A4113	RELAY, 12-VOLT	2
629	269A4123-013	SEAT BELT ASSEMBLY, BLACK FV	1
630	269A4128	3-PACK, LOWER, -55A, 28-VOLT FV	2
631	269A4128	3-PACK, LOWER, -55A, 28-VOLT FV	1
632	269A4155-065	Plate	1
633	269A4155-069	Plate	1
634	269A4155-071	Plate	1
635	269A4157-021	Support	10
636	269A4158-001	STEP RAIL ASSEMBLY (LH)	1
637	269A4158-002	STEP RAIL ASSEMBLY (RH)	1
638	269A4161	Pulley	4
639	269A4162	Bracket	1
640	269A4163	Fitting	5
641	269A4164-011	Tube	1
642	269A4165-021	Sprag	5
643	269A4166-39	Seal	4
644	269A4170	Fitting	8
645	269A4171-001	Fitting	12
646	269A4175	Intake Connector	1
647	269A4191	Utility Light	4

648	269A4193	Bracket	2
649	269A4195-011	MOTOR 24V , BLOWER	1
650	269A4205	VALVE, MANIFOLD HEATER FV	1
651	269A4205-021	Valve Assy	1
652	269A4205-021	VALVE, MANIFOLD HEATER FV	1
653	269A4205-027	Pin	8
654	269A4209	CLAMP, MANIFOLD HEATER	1
655	269A4214	STIFFENER, MANIFOLD HEATER	2
656	269A4228-003	Grip, cyclic Stick	1
657	269A4230	CLAMP, MANIFOLD HEATER	8
658	269A4230	CLAMP, MANIFOLD HEATER	2
659	269A4238	TRIM, HARNESS, BEIGE	5
660	269A4238-007	Trim, Shoulder Harness	2
661	269A4246	RHEOSTAT, TANDEM	2
662	269A4246	RHEOSTAT, TANDEM	1
663	269A4246	RHEOSTAT, TANDEM	1
664	269A4246-003	Rheostat	4
665	269A4246-003	RHEOSTAT, TANDEM	1
666	269A4246-003	RHEOSTAT, TANDEM	1
667	269A4246-003	RHEOSTAT, TANDEM	1
668	269A4246-009	Rheostat	1
669	269A4246-015	Rheostat	7
670	269A4250-011	MANIFOLD PRESS. INDICATOR	1
671	269A4250-011	MANIFOLD PRESS. INDICATOR	1
672	269A4250-011	MANIFOLD PRESS. INDICATOR	1
673	269A4250-011	INDICATOR, MANIFOLD PRESSURE, C MOD FV	1
674	269A4251-005	Twin Tach	1
675	269A4251-011	TWIN TACHOMETER	1
676	269A4251-011	TWIN TACHOMETER	1
677	269A4251-011	TWIN TACHOMETER	1
678	269A4251-015	TWIN-TACHOMETER FV	1
679	269A4251-023	DUAL TACH, ENCODER	1
680	269A4257-013T	BRACKET, NIGHT-LIGHT	1
681	269A4257-013T	BRACKET, NIGHT-LIGHT FV	2
682	269A4257-013T	BRACKET, NIGHT-LIGHT FV	2
683	269A4257-014T	BRACKET, NIGHT-LIGHT	1
684	269A4257-014T	BRACKET, NIGHT-LIGHT FV	1
685	269A4258-025	Harness Instl. Single	2
686	269A4262-015	Harness, reel assy	1
687	269A4262-021	Harness, reel assy	8
688	269A4262-025	Seat Belt Assy	1
689	269A4262-027	Shoulder Harness	3
690	269A4263-005L	CLIP	7
691	269A4263-007L	CLIP	10
692	269A4291-9	Mesh cover	19
693	269A4298	Battery Case	5
694	269A4298-007	SPOUT BATTERY BOX	1
695	269A4298-009	Stud, Battery Inst.	4
696	269A4298-009	STUD, BATTERY INSTALLATION	3
697	269A4298-009	STUD, BATTERY INSTALLATION	2
698	269A4298-011	Channel, Battery Installation	2
699	269A4298-011	CHANNEL, BATTERY INSTALLATION	2
700	269A4298-011	CHANNEL, BATTERY INSTALLATION FV	1
701	269A4321-009	Terminal Board	1

702	269A4321-009	TERMINAL BOARD ASSEMBLY	1
703	269A4331	Bracket	1
704	269A4331	BRACKET, MANIFOLD HEATER	3
705	269A4332	Bracket	1
706	269A4332	BRACKET, MANIFOLD HEATER	4
707	269A4337-003	SPACER	8
708	269A4345	Harness instl.	1
709	269A4363	Light Assy	1
710	269A4436-001	TAIL POSITION LIGHT	1
711	269A4437-001	ALTIMETER/DUAL SCALE	1
712	269A4438-001	REVERSING UNIT	2
713	269A4438-005	Trim Unit	1
714	269A4479-001	EGT ENGINE GAS TEMPERATURE FV	1
715	269A4480-011	Plate Tail Light	2
716	269A4486-001	PRINTED CIRCUIT BOARD ASSY-TRIM FV	2
717	269A4507-003	RETAINER, BATTERY INST'L	2
718	269A4507-005	TUBE, PLASTIC, BATTERY INSTALLATION	1
719	269A4521-023	DUAL TACH, ENCODER	1
720	269A4531-001	SCHWEIZER LOGO	1
721	269A4533-017	ANGLE FV	1
722	269A4540-091	Support	1
723	269A4540-093	Clamp	1
724	269A4540-837	Light Clutch	2
725	269A4540-837	WARNING LIGHT ASSY, RED	13
726	269A4555-801	SUPPORT, ADF ANTENNA FV	1
727	269A4558-003	Bracket	13
728	269A4561	SWITCH, FUEL WARNING, LOW	4
729	269A4561BSC	SWITCH, FUEL WARNING FV	1
730	269A4564-009	ACTUATOR ASSY	1
731	269A4564-009	ACTUATOR ASSY	1
732	269A4564-009	ACTUATOR ASSY	1
733	269A4564-009	ACTUATOR ASSY. (24 VOLT) FV	1
734	269A4564-009	ACTUATOR ASSY. (24 VOLT) FV	4
735	269A4566	Pin	2
736	269A4566	RETAINING PIN	16
737	269A4566	PIN RETAINING	4
738	269A4570	TUBE CLIP	1
739	269A4572-003	Tube Assy	59
740	269A4572-005	TUBE ASSY	1
741	269A4572-005	TUBE ASSEMBLY-PAINTED WHITE FV	1
742	269A4575-003	DEFLECTOR LIGHT, FLOAT KIT	1
743	269A4575-004	DEFLECTOR LIGHT, FLOAT KIT	2
744	269A4576-003	Switch	6
745	269A4576-003	PRESSURE SWITCH	2
746	269A4576-003	SWITCH - PRESSURE	1
747	269A4578	DAMPER, RUNNING TIME METER FV	1
748	269A4583-009	Plate	36
749	269A4583-009	PLATE T/R IDENT.	2
750	269A4583-013	PLATE-S/N	4
751	269A4583-013	PLATE-S/N	11
752	269A4594-003	VALVE, FUEL DRAIN	1
753	269A4594-003	VALVE, FUEL DRAIN	1
754	269A4594-003	VALVE, FUEL DRAIN	1
755	269A4598-003	Valve	1

756	269A4598-003	VALVE, FUEL SHUT-OFF	1
757	269A4598-003	VALVE, FUEL SHUT-OFF	1
758	269A4598-003	VALVE, FUEL SHUT-OFF	1
759	269A4598-003	VALVE, FUEL SHUT-OFF	1
760	269A4598-003	VALVE, FUEL SHUT-OFF	2
761	269A4598-003	VALVE, FUEL SHUT-OFF	1
762	269A4599	CLAMP, CRANK CASE	3
763	269A4599	CLAMP, CRANK CASE	1
764	269A4600-003	INDICATOR, AIRSPEED FV	1
765	269A4600-009	Indicator, Airspeed	1
766	269A4600-009	AIRSPEED INDICATOR	1
767	269A4600-013	AIRSPEED INDICATOR	1
768	269A4600-013	AIRSPEED INDICATOR	1
769	269A4600-013	INDICATOR, AIRSPEED FV	1
770	269A4609	Fuel Sender	8
771	269A4609	SENDER FV	2
772	269A4611	Switch	1
773	269A4611	SWITCH, THERMAL GEAR	1
774	269A4611	SWITCH, THERMAL GEAR	1
775	269A4612	SWITCH, CLUTCH	1
776	269A4613	Switch, Alternator	1
777	269A4618-003	SHAFT ASSY, ENG. TACHO	2
778	269A4618-003	SHAFT ASSEMBLY, ENGINE TACHOMETER FV	1
779	269A4619-003	SHAFT ASSEMBLY, ROTOR TACHOMETER FV	1
780	269A4619-013	SHAFT ASSEMBLY ROTOR TACH FV	1
781	269A4620	Fuseholder	3
782	269A4621-010	FUSE	7
783	269A4621-020	FUSE	1
784	269A4623-003	SHAFT ASSY, ROTOR TACHO	4
785	269A4623-011	Vibrator	3
786	269A4623-011	STARTER-VIBRATOR	2
787	269A4637	Switch, Starter	6
788	269A4639	Gasket	31
789	269A4639	GASKET	21
790	269A4639	GASKET FV	97
791	269A4646-009	DECAL, "FAA COMPLIANCE"	9
792	269A4646-015	DECAL - TQ SPEC	2
793	269A4646-015	DECAL, "TORQUE SPEC"	3
794	269A4646-017	DECAL - GEAR LUB	7
795	269A4646-017	DECAL, "GEAR LUB"	3
796	269A4646-019	Decal, No Step	2
797	269A4646-019	DECAL - NO STEP	12
798	269A4646-019	DECAL, "NO STEP"	2
799	269A4646-023	Decal, No Hold	3
800	269A4646-023	DECAL - NO HOLD	9
801	269A4646-023	DECAL, "NO HOLD"	2
802	269A4646-037	DECAL, COLL FRICT INCREASE-DEC	1
803	269A4646-039	DECAL - STA 100	9
804	269A4646-039	DECAL, "STA 100"	2
805	269A4646-045	DECAL-"STA. 267"	10
806	269A4646-053	DECAL, "GROUND"	3
807	269A4646-125	DECAL, BEARING LUBRICATION	2
808	269A4646-165	DECAL - COLL FRICTION	2
809	269A4646-175	Plate	38

810	269A4646-175	DECAL, "LIMITATIONS PLACARD"	2
811	269A4646-177	DECAL - FUEL QTY	5
812	269A4646-181	DECAL - NO STOWAGE BETWEEN SEATS	2
813	269A4646-183	Decal	6
814	269A4646-183	DECAL - DO NOT APPLY SIDE LOAD	2
815	269A4646-191	DECAL, "CLUTCH ENGAGE"	4
816	269A4646-191	DECAL, "CLUTCH ENGAGE"	14
817	269A4646-201	DECAL, "VNE"	1
818	269A4646-201	DECAL, "VNE"	2
819	269A4646-205	Decal, LUB SAE90	1
820	269A4646-205	DECAL - LUB SAE90	11
821	269A4646-207	Decal, Manifold Pressure	2
822	269A4646-207	DECAL, "MANIFOLD PRESSURE"	2
823	269A4646-209	DECAL - NO STEP	2
824	269A4646-209	DECAL, "NO STEP"	6
825	269A4646-215	DECAL - TO OPEN (WHITE)	1
826	269A4646-216	DECAL - TO OPEN (WHITE)	2
827	269A4646-221	DECAL - TO OPEN (WHITE)	3
828	269A4646-222	DECAL - TO OPEN (WHITE)	3
829	269A4646-225	DECAL - CLOSED (WHITE)	5
830	269A4646-227	Decal, Manifold Pressure	6
831	269A4646-229	DECAL, "MANIFOLD PRESSURE"	2
832	269A4646-249	DECAL - NO HOLD	2
833	269A4646-253	DECAL - THROTTLE OPEN	2
834	269A4646-271	DECAL - GREASE	2
835	269A4647	RECEPTACLE	4
836	269A4658L	LIGHTER, CIGAR	2
837	269A4660-001	Light Assy rot	12
838	269A4660-001	LIGHT, LEFT-HAND POSITION FV	1
839	269A4660-001	LIGHT, LEFT-HAND POSITION FV	1
840	269A4660-002	Light Assy green	9
841	269A4660-002	LIGHT, RIGHT-HAND POSITION FV	1
842	269A4661	LIGHT, TAIL FV	2
843	269A4662	Landing Light	12
844	269A4662	LANDING LIGHT ASSY	1
845	269A4665	Switch, Landing Light	1
846	269A4665	SWITCH, LANDING-LIGHT	2
847	269A4672-007	DECAL - NIGHT LIGHT	2
848	269A4675	Cap	4
849	269A4675-003	Cap	10
850	269A4678	GASKET, CYLINDER FV	5
851	269A4678	GASKET, CYLINDER FV	2
852	269A4679	Gasket	11
853	269A4679	GASKET, ENGINE OIL FV	2
854	269A4683-009	CABLE ASSY, THROTTLE CONTROL	1
855	269A4683-009	CABLE ASSY, THROTTLE CONTROL	3
856	269A4683-009	CABLE ASSEMBLY, THROTTLE CONTROL FV	1
857	269A4685	Clamp	26
858	269A4685	CLAMP, ENGINE COOL SCROLL	2
859	269A4685	CLAMP, ENGINE COOL SCROLL	1
860	269A4685	CLAMP, ENGINE COOL SCROLL	4
861	269A4686-003	SWIVEL	2
862	269A4686-003	SWIVEL	1
863	269A4690	Bushing, Pedal	16

864	269A4690	BUSHING, PEDAL	2
865	269A4690	BUSHING, PEDAL	9
866	269A4691	Bushing Assy	22
867	269A4691	BUSHING ASSEMBLY	2
868	269A4691	BUSHING ASSEMBLY	1
869	269A4693	Pin	2
870	269A4751-003	SUPPORT	1
871	269A4753	Bracket, FWD LDG Light	1
872	269A4753	BRACKET, FORWARD LANDING LIGHT FV	2
873	269A4753	BRACKET, FORWARD LANDING LIGHT FV	3
874	269A4754-004	SUPPORT, POSITION LIGHT	2
875	269A4755-011	HINGE, HALF, CABIN	8
876	269A4755-011	HINGE, HALF, CABIN FV	1
877	269A4755-011	HINGE, HALF, CABIN FV	2
878	269A4755-013	HINGE, DOOR	3
879	269A4755-013	HINGE, DOOR FV	2
880	269A4755-013	HINGE, DOOR FV	2
881	269A4765-003	Retainer	6
882	269A4767	CLAMP, NIGHT-LIGHTS	1
883	269A4788T	DOUBLER	1
884	269A4789	Switch, Pressure	3
885	269A4789	Switch, Pressure	1
886	269A4789	SWITCH, PRESSURE	1
887	269A4789-003	SWITCH, PRESSURE	7
888	269A4789-003	SWITCH, PRESSURE	2
889	269A4798	BRACKET, TAILBOOM	1
890	269A4811	Wedge	1
891	269A4811	WEDGE FV	2
892	269A4836-003	Trim, Reverse Unit	3
893	269A4837	Relay 12 V	1
894	269A4837	Relay 12 V	2
895	269A4837	SWITCH, MAGNETIC START RELAY 12V	2
896	269A4840-003	RETAINER	1
897	269A4841-015	PANEL ASSEMBLY, INSTRUMENT	1
898	269A4845-9	Fairing Panel	3
899	269A4853-007	Holder Assy	1
900	269A4853-007	HOLDER ASSEMBLY	1
901	269A4855-3	Ashtray	2
902	269A4858-009	BRACKET	2
903	269A4858-014	ANGLE R/H FV	1
904	269A4859-7	Fairing	11
905	269A4859-8	Fairing	13
906	269A4860	DIPSTICK, OIL FV	3
907	269A4867-001	PLENUM ASSEMBLY, GAS HEATER FV	1
908	269A4869-007	Kit, Heater	1
909	269A4873-017	CLIP CABIN SEAT BACK FV	2
910	269A4879	SHIELD	3
911	269A4889	SCOOP, AIR	2
912	269A4891	JACKET ASSEMBLY, MANIFOLD HEATER FV	1
913	269A4891-003	JACKET ASSY	1
914	269A4892	Duct, Heater	1
915	269A4892	DUCT, HEATER FV	3
916	269A4895	Switch	2
917	269A4895	Switch	1

918	269A4896	COVER	2
919	269A4897-002	Decal	8
920	269A4897-002	DECAL, CONTROL ASSEMBLY	8
921	269A4897-004	Decal	8
922	269A4897-004	DECAL, CONTROL ASSEMBLY	2
923	269A4897-006	Decal	5
924	269A4897-006	DECAL, CONTROL ASSEMBLY	1
925	269A4897-008	Decal	11
926	269A4897-008	DECAL	4
927	269A4897-008	DECAL	8
928	269A4897-901	Kit control cable	1
929	269A4897-901	Kit control cable	2
930	269A4898-001	MAGNETIC PICK UP	3
931	269A4927-007	BRACKET, 100-AMP ALTIMETER KIT	2
932	269A4931-001L	SUPPORT, AFT NAVIGATION LIGHT	2
933	269A4932-001	Bracket, Strobe Light	12
934	269A4932-001	BRACKET, STROBE LIGHT FV	1
935	269A4932-003	BRACKET, STROBE LIGHT	1
936	269A4933-001	Pad, Strobe Light	3
937	269A4933-003	Clamp, Strobe Light	14
938	269A4934	Bracket, strobe Light	6
939	269A4935-009	Cable, strobe Light	5
940	269A4935-011	Cable, strobe Light	12
941	269A4935-021	CABLE ASSY AFT	1
942	269A4936-001	Shield, Strobe Light	6
943	269A4936-001	SHIELD STROBE LIGHT	3
944	269A4936-003	Shield, AFT Strobe Light	6
945	269A4936-003	SHIELD, AFT STROBE LIGHT FV	1
946	269A4944-501	SWITCH AND JACK ASSEMBLY, RADIO	2
947	269A4951-003	CONNECTOR ASSEMBLY, RADIO FV	11
948	269A4954	BRACKET ASSY	1
949	269A4968-009	Clamp Fuel Pump	2
950	269A4970-007	Cable, Cargo Hook	2
951	269A4970-009	Cable, Cargo Hook	2
952	269A4971-037	WIRE HARNESS FV	2
953	269A4974	Doubler Panel	2
954	269A4975	Washer	6
955	269A4984-003	Bracket	1
956	269A4984-007	Bracket	1
957	269A4984-009	Bracket	1
958	269A4985	CONTROL UNIT, ALTERNATOR	1
959	269A4985-003	Alternator Control	1
960	269A4985-003	CONTROL UNIT, ALTERNATOR FV	1
961	269A4985-003	CONTROL UNIT, ALTERNATOR FV	7
962	269A5011	Jet Assy	6
963	269A5011	JET ASSEMBLY	1
964	269A5015	Strut	6
965	269A5016	Strut	8
966	269A5050-012	BEARING, UPPER PULLEY	1
967	269A5050-012	BEARING, UPPER PULLEY	1
968	269A5050-012	BEARING, UPPER PULLEY	1
969	269A5050-012	BEARING, UPPER PULLEY	1
970	269A5050-012	BEARING, UPPER PULLEY	5
971	269A5050-018	BEARING, T/R PITCH CONTROL	7

972	269A5050-018	BEARING, T/R PITCH CONTROL	1
973	269A5050-020	BEARING, LANDING-GEAR STRUTS	12
974	269A5050-020	BEARING, LANDING-GEAR STRUTS	1
975	269A5050-021	Bearing	32
976	269A5050-022	Bearing	14
977	269A5050-022	BEARING, BALL, FLIGHT CONTROL	15
978	269A5050-022	BEARING, BALL, FLIGHT CONTROL	4
979	269A5050-024	BEARING, LANDING-GEAR STRUTS	14
980	269A5050-024	BEARING, LANDING-GEAR STRUTS	3
981	269A5050-025	Bearing	12
982	269A5050-025	BEARING, FLIGHT CONTROL	1
983	269A5050-025	BEARING, FLIGHT CONTROL	11
984	269A5050-026	Bearing	5
985	269A5050-026	BEARING, TORQUE TUBE, CABIN	3
986	269A5050-026	BEARING, TORQUE TUBE, CABIN	1
987	269A5050-027	Bearing	24
988	269A5050-027	BEARING, BALL, FLIGHT CONTROL	6
989	269A5050-027	BEARING, BALL, FLIGHT CONTROL	5
990	269A5050-028	Bearing	2
991	269A5050-028	BEARING, BALL, FLIGHT CONTROL	4
992	269A5050-029	BEARING, BALL, FLIGHT CONTROL	16
993	269A5050-029	BEARING, BALL, FLIGHT CONTROL	3
994	269A5050-030	Bearing	4
995	269A5050-030	BEARING, BALL, FLIGHT CONTROL	6
996	269A5050-030	BEARING, BALL, FLIGHT CONTROL	1
997	269A5050-030	BEARING, BALL, FLIGHT CONTROL	7
998	269A5050-030P	Bearing	1
999	269A5050-031	Bearing	34
1000	269A5050-031	BEARING, RUDDER PEDAL	1
1001	269A5050-031	BEARING, RUDDER PEDAL	10
1002	269A5050-032	Bearing	65
1003	269A5050-032	BEARING, RUDDER PEDAL FV	5
1004	269A5050-033	BEARING, LANDING-GEAR STRUT	11
1005	269A5050-034	BEARING, ROD END FV	6
1006	269A5050-034	BEARING, ROD END FV	5
1007	269A5050-035	BEARING, ROD END FLIGHT CONTROL FV	2
1008	269A5050-035	BEARING, ROD END FLIGHT CONTROL FV	4
1009	269A5050-036	Bearing	35
1010	269A5050-036	BEARING, FLIGHT CONTROL ROD	10
1011	269A5050-036	BEARING, FLIGHT CONTROL ROD FV	2
1012	269A5050-038	BEARING, PUSH ROD	8
1013	269A5050-039	Bearing	45
1014	269A5050-039	BEARING, SPHERICAL, GREASE LUB	8
1015	269A5050-039	BEARING, SPHERICAL, GREASE LUBE	1
1016	269A5050-040	Bearing	18
1017	269A5050-040	BEARING, SPHERICAL, GREASE LUBE	43
1018	269A5050-041	BEARING, ROD END FV	1
1019	269A5050-042	Bearing	16
1020	269A5050-043	Bearing	34
1021	269A5050-043	BEARING, SPHERICAL, M/R DAMPER	7
1022	269A5050-043	BEARING, SPHERICAL, M/R DAMPER	2
1023	269A5050-043	BEARING, SPHERICAL, M/R DAMPER	5
1024	269A5050-043	BEARING, SPHERICAL, M/R DAMPER	7
1025	269A5050-044	Bearing	36

1026	269A5050-044	BEARING, ROLLER; M/R FLAP	6
1027	269A5050-044	BEARING, ROLLER, M/R FLAP	3
1028	269A5050-044	BEARING, ROLLER, M/R FLAP	4
1029	269A5050-044P	Bearing	9
1030	269A5050-048	Bearing	2
1031	269A5050-051	Bearing	7
1032	269A5050-051	BEARING, BALL, ANGLE CONTACT, M/R/D	1
1033	269A5050-056	BEARING, BALL, BELT DRIVE	8
1034	269A5050-056	BEARING, BALL, BELT DRIVE	2
1035	269A5050-061	BEARING, SPHERICAL, M/R DAMPER	14
1036	269A5050-063	BEARING, M/R DRIVE SHAFT	1
1037	269A5050-063	BEARING, M/R DRIVE SHAFT	1
1038	269A5050-063	BEARING, M/R DRIVE SHAFT	1
1039	269A5050-063	BEARING, M/R DRIVE SHAFT	14
1040	269A5050-064	BEARING, T/R TRANSMISSION	4
1041	269A5050-064	BEARING, T/R TRANSMISSION	2
1042	269A5050-068	BEARING, T/R PITCH CONTROL	3
1043	269A5050-071	Bearing	16
1044	269A5050-071	BEARING FLAPPING HINGE	1
1045	269A5050-071	BEARING FLAPPING HINGE	1
1046	269A5050-071	BEARING FLAPPING HINGE	1
1047	269A5050-071	BEARING FLAPPING HINGE	1
1048	269A5050-071	BEARING FLAPPING HINGE	1
1049	269A5050-071	BEARING FLAPPING HINGE	1
1050	269A5050-071	BEARING FLAPPING HINGE	1
1051	269A5050-071	BEARING FLAPPING HINGE	1
1052	269A5050-071	BEARING FLAPPING HINGE	1
1053	269A5050-071	BEARING, FLAPPING HINGE	13
1054	269A5050-073	Bearing	5
1055	269A5050-073	BEARING, MAIN ROTOR DRIVE SHAFT	2
1056	269A5050-073	BEARING, MAIN ROTOR DRIVE SHAFT	27
1057	269A5050-074	BEARING, CLUTCH ASSY	1
1058	269A5050-074	BEARING, CLUTCH ASSEMBLY	2
1059	269A5050-074	BEARING, CLUTCH ASSEMBLY	1
1060	269A5050-074	BEARING, CLUTCH ASSEMBLY	1
1061	269A5050-076	Bearing	13
1062	269A5050-076	BEARING, ROD ASSY	5
1063	269A5050-080	BEARING, BELT DRIVE	1
1064	269A5050-080	BEARING, BELT DRIVE	1
1065	269A5050-080	BEARING, BELT DRIVE	1
1066	269A5050-080	BEARING, BELT DRIVE	1
1067	269A5050-080	BEARING, BELT DRIVE	1
1068	269A5050-080	BEARING, BELT DRIVE	1
1069	269A5050-080	BEARING, BELT DRIVE	1
1070	269A5050-080	BEARING, BELT DRIVE	1
1071	269A5050-080	BEARING, BELT DRIVE	1
1072	269A5050-080	BEARING, BELT DRIVE	1
1073	269A5050-080	BEARING, BELT DRIVE	1
1074	269A5050-080	BEARING, BELT DRIVE	1
1075	269A5050-080	BEARING, BELT DRIVE	1
1076	269A5050-080	BEARING, BELT DRIVE	1
1077	269A5050-080	BEARING, BELT DRIVE LOWER	8
1078	269A5050-085	Bearing	1
1079	269A5050-085	BEARING, BELT DRIVE	1

1080	269A5050-085	BEARING, BELT DRIVE	1
1081	269A5050-085	BEARING, BELT DRIVE	1
1082	269A5050-085	BEARING, BELT DRIVE LOWER	2
1083	269A5050-085	BEARING, BELT DRIVE LOWER	1
1084	269A5050-087	BEARING, T/R CONTROL	17
1085	269A5050-088	BEARING, T/R TRANSMISSION	1
1086	269A5050-088	BEARING, T/R TRANSMISSION	1
1087	269A5050-088	BEARING, T/R TRANSMISSION	1
1088	269A5050-089	BEARING, T/R TRANSMISSION	1
1089	269A5050-089	BEARING, T/R TRANSMISSION	1
1090	269A5050-089	BEARING, T/R TRANSMISSION	1
1091	269A5050-089	BEARING, T/R TRANSMISSION	1
1092	269A5050-089	BEARING, T/R TRANSMISSION	1
1093	269A5050-089	BEARING, T/R TRANSMISSION	1
1094	269A5050-089	BEARING, T/R TRANSMISSION	1
1095	269A5050-089	BEARING, T/R TRANSMISSION	2
1096	269A5050-090	Bearing	1
1097	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1098	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1099	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1100	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1101	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1102	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1103	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1104	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1105	269A5050-090	BEARING, BALL, INPUT, T/R TRANSMISSION	1
1106	269A5050-090	BEARING, BALL, INPUT, T/R TRANS	2
1107	269A5050-091	BEARING	5
1108	269A5050-092	BEARING	28
1109	269A5050-092	BEARING UPPER RH FV	10
1110	269A5050-092	BEARING UPPER RH FV	1
1111	269A5050-092	BEARING UPPER RH FV	1
1112	269A5050-092	BEARING UPPER RH FV	1
1113	269A5050-093	BEARING, ROD END	31
1114	269A5050-093	BEARING LOWER LH FV	4
1115	269A5050-093	BEARING LOWER LH FV	1
1116	269A5050-093	BEARING LOWER LH FV	1
1117	269A5050-094	BEARING	6
1118	269A5050-094	BEARING	2
1119	269A5050-095	BEARING	1
1120	269A5050-095	BEARING	1
1121	269A5050-095	BEARING	2
1122	269A5050-095	BEARING	2
1123	269A5050-096	BEARING	2
1124	269A5050-096	BEARING, BELT DRIVE UPPER	4
1125	269A5050-096	BEARING, BELT DRIVE UPPER	1
1126	269A5050-099	BEARING	1
1127	269A5050-099	BEARING	1
1128	269A5050-100	BEARING, LANDING-GEAR DAMPER	1
1129	269A5051-002	BEARING	6
1130	269A5051-002	BEARING, M/R TRANSMISSION	1
1131	269A5051-003	Bearing	1
1132	269A5051-003	BEARING, M/R TRANSMISSION	1
1133	269A5051-004	BEARING, CUP, M/R TRANSMISSION FV	2

1134	269A5051-006	CONE, M/R TRANSMISSION	1
1135	269A5051-006	CONE, M/R TRANSMISSION	1
1136	269A5051-007	Bearing	1
1137	269A5051-007	BEARING, M/R TRANSMISSION	1
1138	269A5051-008	Cone	1
1139	269A5051-008	CONE, M/R TRANSMISSION	1
1140	269A5051-009	CUP, M/R TRANSMISSION	3
1141	269A5051-009	CUP, M/R TRANSMISSION	1
1142	269A5051-010	CONE, M/R TRANSMISSION	2
1143	269A5051-010	CONE, M/R TRANSMISSION	1
1144	269A5051-011	CUP, M/R TRANSMISSION	1
1145	269A5051-011	CUP, M/R TRANSMISSION FV	1
1146	269A5051-018	Cup	1
1147	269A5051-018	CUP, M/R TRANSMISSION	1
1148	269A5051-018	CUP, M/R TRANSMISSION FV	1
1149	269A5051-019	Cone	1
1150	269A5051-019	CONE, M/R TRANSMISSION	1
1151	269A5051-020	BEARING, M/R TRANSMISSION	1
1152	269A5051-020	BEARING, M/R TRANSMISSION	1
1153	269A5051-020	BEARING, M/R TRANSMISSION	1
1154	269A5051-020	BEARING, M/R TRANSMISSION	1
1155	269A5060	Bushing	15
1156	269A5060	BUSHING, M/R MAST	2
1157	269A5101	SHIM, GEAR DRIVE ASSY	3
1158	269A5102	Shim	1
1159	269A5102	SHIM, M/R TRANSMISSION	2
1160	269A5102	SHIM, M/R TRANSMISSION	1
1161	269A5102	SHIM, M/R TRANSMISSION	5
1162	269A5103-051	PINION ASSY FV	1
1163	269A5103-055	PINION ASSY FV	1
1164	269A5104-007	GEAR, RING, M/R TRANSMISSION	1
1165	269A5104-007	GEAR MAIN GEAR BOX FV	1
1166	269A5106-003	SHAFT, GEAR, T/R TRANSMISSION	1
1167	269A5106-003	SHAFT, GEAR, T/R TRANSMISSION	1
1168	269A5107	Shim	9
1169	269A5107	SHIM, M/R TRANSMISSION	6
1170	269A5108	Retainer	1
1171	269A5109	Retainer	8
1172	269A5114	Cover	1
1173	269A5114	Cover	1
1174	269A5115	SLEEVE PINION FWD FV	2
1175	269A5119	Gasket	2
1176	269A5119	GASKET	7
1177	269A5119	GASKET, M/R TRANSMISSION FV	5
1178	269A5120	Retainer	3
1179	269A5121	GASKET, M/R TRANSMISSION	14
1180	269A5121	GASKET, M/R TRANSMISSION FV	15
1181	269A5124	Spacer	26
1182	269A5124	SPACER, M/R TRANSMISSION	9
1183	269A5124	SPACER, M/R TRANSMISSION FV	5
1184	269A5131	PINION, HELICAL, OIL PUMP DR SHAFT FV	7
1185	269A5132	OIL PUMP ASSEMBLY, M/R TRANSMISSION FV	1
1186	269A5133	SHAFT, M/R TRANSMISSION	1
1187	269A5134	GEAR, SPUR, M/R TRANSMISSION	1

1188	269A5135	GEAR, IDLER, M/R TRANSMISSION	1
1189	269A5137	Gasket	16
1190	269A5137	GASKET	13
1191	269A5137	GASKET, M/R TRANSMISSION FV	6
1192	269A5138	Gasket	22
1193	269A5138	GASKET	12
1194	269A5138	GASKET, M/R TRANSMISSION FV	6
1195	269A5139	Gasket	4
1196	269A5140	Gasket	31
1197	269A5140	GASKET	22
1198	269A5140	GASKET, M/R TRANSMISSION FV	6
1199	269A5141	Shaft Assy	1
1200	269A5141	Shaft Assy	1
1201	269A5141	PUMP GEAR DRIVE SHAFT, M/R TRANSMISSION	3
1202	269A5142	SLEEVE, PUMP DRIVE, M/R TRANSMISSION	1
1203	269A5143	Oil Pump Shaft	3
1204	269A5143	SHAFT PUMP DRIVE	2
1205	269A5144	Washer	5
1206	269A5144	WASHER, PUMP SHAFT, M/R TRANSMISSION	4
1207	269A5144	WASHER, PUMP SHAFT, M/R TRANSMISSION	1
1208	269A5144	WASHER, PUMPSHAFT, M/R TRANS	3
1209	269A5147	Shim	92
1210	269A5147	SHIM, PINION BRG RET, M/R TRANSMISSION	16
1211	269A5147	SHIM, PINION BRG RET, M/R TRANS	17
1212	269A5147	SHIM, PINION BRG RET, M/R TRANS	1
1213	269A5150	Washer	16
1214	269A5150	WASHER, PINION, M/R TRANSMISSION	5
1215	269A5150-003	Washer	6
1216	269A5150-003	SPACER	9
1217	269A5150-005	Washer	9
1218	269A5150-005	WASHER	9
1219	269A5150-007	Washer	14
1220	269A5150-007	WASHER	12
1221	269A5150-009	Washer Kit	5
1222	269A5151	FILLER ASSEMBLY, M/R TRANSMISSION FV	5
1223	269A5152	Bushing	4
1224	269A5152	BUSHING	3
1225	269A5152	BUSHING-LWR COVER	3
1226	269A5152	BUSHING-LWR COVER	2
1227	269A5153	Bushing	2
1228	269A5153	BUSHING	5
1229	269A5153	BUSHING-LWR COVER	2
1230	269A5156	STRAINER ASSEMBLY, M/R TRANSMISSION FV	2
1231	269A5159	PLUG	47
1232	269A5159	PLUG	1
1233	269A5159	PLUG	2
1234	269A5160	LINER, CARRIER	3
1235	269A5160L	LINER, CARRIER	3
1236	269A5160L	LINER, CARRIER FV	1
1237	269A5162	Washer, Oil Pump	9
1238	269A5162	WASHER, OIL PUMP SHAFT, M/R TRANSMISSION	4
1239	269A5162	WASHER, OIL PUMP SHAFT, M/R TRANS	1
1240	269A5170	Gasket	10
1241	269A5170	GASKET, M/R TRANSMISSION	26

1242	269A5170	GASKET, M/R TRANSMISSION FV	8
1243	269A5173	Washer	15
1244	269A5173	CAP, GEAR DRIVE, M/R TRANSMISSION	4
1245	269A5178-009	Collar, Oil Seal	18
1246	269A5178-009	COLLAR, PINION OIL SEAL	1
1247	269A5182	Housing Assy upper	1
1248	269A5185	Shim	2
1249	269A5185	SHIM, OIL SPRAY NOZZLE, M/R TRANSMISSION	8
1250	269A5185	SHIM, OIL SPRAY NOZZLE, M/R TRANS	2
1251	269A5186	BUSHING, M/R TRANSMISSION	11
1252	269A5186	BUSHING, M/R TRANSMISSION	2
1253	269A5187	Gasket	40
1254	269A5187	GASKET, M/R TRANSMISSION	18
1255	269A5187	GASKET, M/R TRANSMISSION FV	11
1256	269A5190-007	OVERHAUL KIT, MAIN TRANSMISSION	1
1257	269A5190-013	OVERHAUL KIT, MAIN TRANSMISSION	1
1258	269A5192	Strainer	7
1259	269A5192	STRAINER ASSEMBLY, M/R TRANSMISSION FV	1
1260	269A5192	STRAINER ASSEMBLY, M/R TRANSMISSION FV	2
1261	269A5193-1B	Carrier	1
1262	269A5194	CARRIER ASSEMBLY, M/R TRANSMISSION	1
1263	269A5197	CHIP DETECTOR, T/R TRANSMISSION FV	1
1264	269A5198-001	Seal	4
1265	269A5198-001	SEAL, M/R GEAR	11
1266	269A5198-001	SEAL M/R GEAR FV	2
1267	269A5325-001	SPLINED MAIN ROTOR HUB FV	1
1268	269A5325-001	SPLINED MAIN ROTOR HUB FV	3
1269	269A5326-001	SPLINED MAIN ROTOR DRIVE SHAFT FV	3
1270	269A5402-001	Nut	1
1271	269A5402-001	NUT-BELT DRIVE, UPR, PULLEY R/	1
1272	269A5402-003	NUT-BELT DRIVE, UPR, PULLEY L/	1
1273	269A5409	Retainer	17
1274	269A5409	RETAINER, UPPER PULLEY FV	1
1275	269A5411	DRIVE ADAPTER	1
1276	269A5411	DRIVE ADAPTER	1
1277	269A5411	DRIVE ADAPTER FV	1
1278	269A5413	Casting	1
1279	269A5415	Nut, Belt Drive	69
1280	269A5415	NUT, BELT DRIVE	2
1281	269A5415	NUT, BELT DRIVE FV	3
1282	269A5416	Washer	9
1283	269A5416	WASHER, BELT DRIVE	2
1284	269A5416	WASHER, BELT DRIVE	2
1285	269A5416	WASHER, BELT DRIVE	3
1286	269A5419	Plug, Belt Drive	5
1287	269A5419	PLUG	1
1288	269A5419	PLUG, BELT DRIVE FV	2
1289	269A5419	PLUG, BELT DRIVE FV	1
1290	269A5421-003	Pulley , Limiter	5
1291	269A5423	Strut Assy	1
1292	269A5423	STRUT ASSY BELT DRIVE, PULLEY	1
1293	269A5423	STRUT ASSEMBLY, BELT DRIVE FV	1
1294	269A5423-009	STRUT ASSY BELT DRIVE, PULLEY	1
1295	269A5430	Spline	2

1296	269A5430	Spline	2
1297	269A5430	Spline	2
1298	269A5430	SPLINE	1
1299	269A5430	SPLINE	1
1300	269A5430-001	Spline	3
1301	269A5430-001	DRIVING SPLINE, BELT DRIVE	1
1302	269A5430-001	DRIVING SPLINE, BELT DRIVE FV	1
1303	269A5436-013	FITTING	10
1304	269A5436-013	FITTING ASSEMBLY FV	1
1305	269A5437	Spacer	7
1306	269A5437	SPACER, BELT DRIVE	21
1307	269A5437	SPACER, BELT DRIVE FV	3
1308	269A5437-003	SPACER-CLUTCH CONTROL	2
1309	269A5441	Plug	22
1310	269A5441	PLUG, BELT DRIVE	4
1311	269A5441	PLUG, BELT DRIVE FV	1
1312	269A5441	PLUG, BELT DRIVE FV	1
1313	269A5443	Tube	4
1314	269A5443	TUBE, BELT DRIVE	6
1315	269A5443	TUBE, BELT DRIVE FV	4
1316	269A5444-005	WASHER	39
1317	269A5449	Nut	20
1318	269A5449	NUT, BELT DRIVE	2
1319	269A5449	NUT, BELT DRIVE	2
1320	269A5449-005	NUT, MAIN GEAR BOX, PINION AFT END	1
1321	269A5449-005	NUT, MAIN GEAR BOX	1
1322	269A5449-007	NUT, MAIN GEAR BOX, PINION AFT END	2
1323	269A5449-007	NUT, MAIN GEAR BOX, PINION AFT END	2
1324	269A5451	Spring	18
1325	269A5451	SPRING, BELT DRIVE IDLER	1
1326	269A5451	SPRING, BELT DRIVE IDLER	2
1327	269A5451	SPRING, BELT DRIVE IDLER	1
1328	269A5453	Housing	9
1329	269A5453L	HOUSING	2
1330	269A5453L	HOUSING FV	2
1331	269A5454	SEAT	3
1332	269A5459	Roller	1
1333	269A5462-003	CAP, RETAINING	4
1334	269A5462-003	CAP, RETAINING FV	6
1335	269A5462-3	Cap	7
1336	269A5463	STRAP, M/R BELT	7
1337	269A5465	CABLE, CLUTCH CONTROL	1
1338	269A5466	WASHER CLUTCH CONTROL	2
1339	269A5466-003	Washer	10
1340	269A5466-003	WASHER, CLUTCH CONTROL	5
1341	269A5467-003L	END, CLUTCH CONTROL	15
1342	269A5467-003L	END, CLUTCH CONTROL FV	2
1343	269A5468	Spacer	6
1344	269A5468	SPACER, LOWER	1
1345	269A5468-003	Spacer	2
1346	269A5468-003	SPACER, LOWER, BELT DRIVE	3
1347	269A5468-003	SPACER, LOWER, BELT DRIVE	1
1348	269A5471-013	Cover H-Frame	1
1349	269A5472	Bracket	2

1350	269A5472	BRACKET, CABLE PULLEY FV	3
1351	269A5473	BOOT	4
1352	269A5473	BOOT FV	11
1353	269A5473	BOOT FV	1
1354	269A5475	SPACER, BELT DRIVE	4
1355	269A5475	SPACER, BELT DRIVE FV	6
1356	269A5475-003	SPACER-IDLER	4
1357	269A5476	SPRING	1
1358	269A5476-003	SPRING - BELT DRIVE TENSION CONTROL	6
1359	269A5476-003	SPRING - BELT DRIVE TENSION CNTRL	2
1360	269A5483-001	Spring Assy	1
1361	269A5483-007	RETAINER ASSEMBLY	3
1362	269A5483-017	CABLE SUB ASSY	2
1363	269A5483-017	CABLE SUBASSEMBLY FV	1
1364	269A5484	Fitting	6
1365	269A5484	FITTING-CLUTCH CONTROL SPRING	3
1366	269A5484	FITTING	2
1367	269A5485-003	Guide	1
1368	269A5485-003	GUIDE	8
1369	269A5485-003	GUIDE FV	12
1370	269A5486-003	Washer	9
1371	269A5487	GASKET	16
1372	269A5487	GASKET FV	9
1373	269A5488	SPRING BELT DRIVE	2
1374	269A5489	Clevis	2
1375	269A5489	CLEVIS, CLUTCH ACTUATOR SHAFT FV	2
1376	269A5491-005	Bracket	4
1377	269A5491-005	BRACKET, FUSELAGE	3
1378	269A5491-800	CENTER FRAME STL. STRAP CLUTCH	3
1379	269A5492	Shim Kit	1
1380	269A5492	SHIM KIT, BELT DRIVE	9
1381	269A5492-003	Shim	111
1382	269A5492-003	SHIM	3
1383	269A5492-003	SHIM, UPPER PULLEY SPACER	4
1384	269A5492-005	Shim	31
1385	269A5492-007	Shim	30
1386	269A5493	SHIM SET	2
1387	269A5495	Washer	22
1388	269A5497-009	PULLEY ASSEMBLY, LOWER	1
1389	269A5498-005	Shaft Assy	1
1390	269A5498-005	SHAFT, LOWER PULLEY FV	2
1391	269A5502-001	SPACER, BELT DRIVE	4
1392	269A5502-001	SPACER, BELT DRIVE	1
1393	269A5505-003	UPPER PULLEY ASSY	1
1394	269A5506	ARM	2
1395	269A5507-007	Cap Assy	5
1396	269A5507-007	CAP ASSEMBLY, UPPER PULLEY	1
1397	269A5507-007	CAP ASSEMBLY, UPPER PULLEY FV	1
1398	269A5507-011	SHIM	10
1399	269A5507-011	SHIM	9
1400	269A5508-007	Cap Assy	3
1401	269A5509-003	RETAINER, GREASE, SYNTHETIC RUBBER	1
1402	269A5509-003	RETAINER, GREASE, SYNTHETIC RUBBER FV	6
1403	269A5509-003	RETAINER, GREASE, SYNTHETIC RUBBER FV	3

1404	269A5509-003	RETAINER, GREASE, SYNTHETIC RUBBER FV	1
1405	269A5510-905	JAM NUT ASSEMBLY FV	1
1406	269A5512-005	V-BELT SET, BELT DRIVE	1
1407	269A5512-005	V-BELT SET, BELT DRIVE	4
1408	269A5512-011	V-BELT SET - BANDED	1
1409	269A5512-011	V-BELT SET - BANDED	1
1410	269A5517-013	Bracket	11
1411	269A5517-013	BRACKET ASSEMBLY, BELT DRIVE	2
1412	269A5517-017	BRACKET ASSEMBLY, BELT DRIVE	3
1413	269A5517-029	Bracket	3
1414	269A5517-029	BRACKET ASSY	8
1415	269A5519	Bracket	2
1416	269A5519-007	BRACKET ASSY, BELT DRIVE	2
1417	269A5519-007	BRACKET ASSEMBLY, BELT DRIVE FV	1
1418	269A5519-013	Bracket	2
1419	269A5519-013	BRACKET ASSY	3
1420	269A5519-013	BRACKET ASSEMBLY, BELT DRIVE	2
1421	269A5527	BUSHING, H-FRAME	14
1422	269A5527	BUSHING, H-FRAME	4
1423	269A5547-005	PANEL, BELT DRIVE FV	1
1424	269A5547-005	PANEL, BELT DRIVE FV	3
1425	269A5547-5	Panel	1
1426	269A5548	SPACER, BELT DRIVE	6
1427	269A5552	RING, ALIGNMENT	6
1428	269A5552	RING, ALIGNMENT FV	3
1429	269A5558	RING, RETAINER	3
1430	269A5559-003	SHAFT, BELT DRIVE FV	1
1431	269A5559-003	SHAFT, BELT DRIVE FV	9
1432	269A5560	Sleeve	27
1433	269A5560	SLEEVE, BELT DRIVE	3
1434	269A5560	SLEEVE, BELT DRIVE	2
1435	269A5560	SLEEVE-BELT DRIVE FV	2
1436	269A5560-003	SLEEVE, BELT DRIVE	3
1437	269A5560-003	SLEEVE, BELT DRIVE FV	3
1438	269A5562	Spacer	1
1439	269A5562	SPACER, BUSHING, BELT DRIVE	1
1440	269A5562	SPACER, BUSHING, BELT DRIVE	3
1441	269A5562	SPACER, BUSHING, BELT DRIVE	13
1442	269A5562	SPACER, BUSHING, BELT DRIVE	1
1443	269A5565-001	H-Frame	2
1444	269A5565-001	H-FRAME ASSEMBLY, BELT DRIVE	1
1445	269A5565-807	H-FRAME ASSEMBLY, BELT DRIVE 333/40	1
1446	269A5573-011	H-FRAME	1
1447	269A5575	SUPPORT	1
1448	269A5580	Retainer	9
1449	269A5580	RETAINER, CLUTCH ASSEMBLY	2
1450	269A5581	Cover	10
1451	269A5581	COVER, CLUTCH ASSEMBLY	1
1452	269A5582	IDLER PULLEYS WITH ADAPTERS, B	2
1453	269A5583	SHAFT, BELT DRIVE	4
1454	269A5583	SHAFT, BELT DRIVE FV	2
1455	269A5585-003	RETAINER TUBE	1
1456	269A5585-003	RETAINER TUBE FV	2
1457	269A5586-001L	SEAT, CLUTCH CONTROL	8

1458	269A5586-001L	SEAT, CLUTCH CONTROL FV	2
1459	269A5588-001	Bushing	4
1460	269A5588-001	SEAT, CLUTCH CONTROL	7
1461	269A5590-001	Spring Assy	7
1462	269A5590-009	CABLE SUBASSEMBLY	4
1463	269A5590-013	Retainer	13
1464	269A5590-013	RETAINER	5
1465	269A5590-013	RETAINER FV	1
1466	269A5590-101	TUBE	11
1467	269A5591-001	Nutplate	49
1468	269A5595-001	BUSHING, SPLIT RING, BELT DRIVE	2
1469	269A5595-001	BUSHING, SPLIT RING, BELT DRIVE	1
1470	269A5598	PLATE WARNING, T/R TRANSMISSION	12
1471	269A5599-001	HUB ASSY, BELT DRIVE, UPR PULLEY	3
1472	269A5626-005	SHAFT, T/R TRANSMISSION	1
1473	269A5626-005	SHAFT, T/R TRANSMISSION	1
1474	269A5626-005	SHAFT, T/R TRANSMISSION FV	1
1475	269A5633	Shim	2
1476	269A5633	SHIM, AFT BEARING CAP, T/R TRANSMISSION	11
1477	269A5634	Shim	8
1478	269A5634	SHIM, INPUT GEAR, T/R TRANSMISSION	10
1479	269A5638	Shim	18
1480	269A5638	SHIM, PIN & OUTPUT BRG CAP, T/R TRANSMISSI	15
1481	269A5639	SPACER, COUPLING INPUT, T/R TRANSMISSION	5
1482	269A5645	PLUG	1
1483	269A5648-003	BREATHER, T/R TRANSMISSION	1
1484	269A5653	Fork	3
1485	269A5653T	FORK KIT, T/R ASSEMBLY	1
1486	269A5653T	FORK KIT, T/R ASSEMBLY FV	1
1487	269A5655	Decal	5
1488	269A5655	DECAL, OIL LEVEL PLUG, T/R TRANSMISSION	18
1489	269A5655	DECAL, OIL LEVEL PLUG, T/R TRANS	5
1490	269A5655-003	Decal	10
1491	269A5655-003	DECAL, OIL LEVER PLUG	4
1492	269A5655-003	DECAL-OIL LEVER PLUG	4
1493	269A5663	Stud	1
1494	269A5663	BOLT T/R ASSEMBLY	8
1495	269A5664-003	FORK ASSY	1
1496	269A5664-003	FORK ASSY FV	1
1497	269A5665	Retainer	1
1498	269A5666	Retainer	4
1499	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1500	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1501	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1502	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1503	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1504	269A5667-005	TEETER BRG (80-20247) T/R ELASTOM	1
1505	269A5708	PACKING	2
1506	269A5708	PACKING, BELT DRIVE FV	9
1507	269A5708	PACKING, BELT DRIVE FV	1
1508	269A5712	CUP, T/R DRIVE SHAFT	2
1509	269A5714	SEAL NUT, BELT DRIVE	2
1510	269A5718-003	SLEEVE, T/R DRIVE SHAFT FV	1
1511	269A5718-003	SLEEVE, T/R DRIVE SHAFT FV	2

1512	269A5719	Spring	35
1513	269A5719	SPRING, DAMPER ASSEMBLY, TAILBOOM	8
1514	269A5719	SPRING, DAMPER ASSEMBLY, TAILBOOM	3
1515	269A5720	Damper Assy	12
1516	269A5721	Bracket	2
1517	269A5722-003	Damper Block	6
1518	269A5722-003	BLOCK, DAMPER, TAILBOOM FV	1
1519	269A5723	PLATE, TAILBOOM	2
1520	269A5801-003	GUIDE	1
1521	269A5801-011	RETRACTOR FV	1
1522	269A6025-901	PANEL, V-BELT COVER ATTACHMENT KIT	1
1523	269A6028	SPACER, T/R GEARBOX	2
1524	269A6028	SPACER, T/R GEARBOX	1
1525	269A6029	Nut, Driven Spline	11
1526	269A6029	NUT, DRIVEN SPLINE, T/R GEARBOX	1
1527	269A6029	NUT, DRIVEN SPLINE, T/R GEARBOX	1
1528	269A6030	Spline	2
1529	269A6030	DRIVEN SPLINE, T/R GEARBOX	1
1530	269A6030-005	DRIVEN SPLINE, T/R GEARBOX FV	2
1531	269A6031	Seal Nut	9
1532	269A6031	SEAL NUT, TAIL ROTOR	2
1533	269A6032	PACKING	24
1534	269A6032	PACKING, TAIL ROTOR FV	11
1535	269A6032	PACKING, TAIL ROTOR FV	1
1536	269A6032	PACKING, TAIL ROTOR FV	1
1537	269A6035	Blade	1
1538	269A6035-023	BLADE ASSEMBLY, TAIL ROTOR FV	11
1539	269A6035-23	T/R BLADE	1
1540	269A6035-23	T/R BLADE	1
1541	269A6035-23	T/R BLADE	1
1542	269A6040-009	T/R DRIVE SHAFT	1
1543	269A6042	Bellcrank	8
1544	269A6042	BELLCRANK ASSEMBLY FV	1
1545	269A6044-019	ROD ASS'Y FV	1
1546	269A6045-011	Adapter	4
1547	269A6045-011	Adapter	1
1548	269A6045-011	ADAPTER ASSY, GEARBOX	1
1549	269A6045-011	ADAPTER ASSEMBLY, GEARBOX FV	1
1550	269A6045-011	ADAPTER ASSEMBLY, GEARBOX FV	1
1551	269A6049-003	Swashplate Assy	6
1552	269A6049-003	Swashplate Assy	1
1553	269A6049-003	SWASHPLATE ASSEMBLY	2
1554	269A6049-003	SWASHPLATE ASSEMBLY FV	1
1555	269A6050-005	T/R Pitch Control	3
1556	269A6050-005	PITCH CONTROL ASSEMBLY, TAIL ROTOR FV	2
1557	269A6051	LOCK WASHER	7
1558	269A6051	WASHER	25
1559	269A6058	ARM T/R	2
1560	269A6058-005	ARM, T/R BLADES	4
1561	269A6059	BUSHING	4
1562	269A6059-003	Bushing	24
1563	269A6062-003	Bearing	7
1564	269A6062-003	BEARING	16
1565	269A6062-005	BEARING, T/R BLADES	29

1566	269A6062-007	BEARING T/R	5
1567	269A6062-007	BEARING, T/R BLADES FV	4
1568	269A6062-007	BEARING, T/R BLADES FV	2
1569	269A6062-009	BEARING T/R	1
1570	269A6062-009	BEARING, T/R BLADES FV	4
1571	269A6062-009	BEARING, T/R BLADES FV	2
1572	269A6063-005	SEAL, OIL INPUT, T/R TRANSMISSION FV	3
1573	269A6063-009	SEAL - OIL INPUT T/R TRANSMISSION	29
1574	269A6063-009	SEAL - OIL INPUT T/R TRANSMISSION FV	4
1575	269A6063-011	SEAL - OIL OUTPUT T/R TRANSMISSION	18
1576	269A6063-011	SEAL - OIL OUTPUT T/R TRANSMISSION FV	1
1577	269A6064	BUSHING, T/R ASSEMBLY	8
1578	269A6064	BUSHING, T/R ASSEMBLY	1
1579	269A6065-507	Snap Pack, T/R	2
1580	269A6065-507	STRAP ASSEMBLY, T/R ASSEMBLY FV	2
1581	269A6073-003	Washer	23
1582	269A6073T	SHIM KIT, ASSORTED, T/R ASSEMBLY	3
1583	269A6082	Swage Ring	13
1584	269A6082	SWAGE RING, PITCH CONTROL BEARING	7
1585	269A6087-001	Shim	15
1586	269A6087-001	SHIM, T/R GEAR BOX	20
1587	269A6091-005	LINK ASSEMBLY, T/R ASSEMBLY FV	5
1588	269A6091-005	LINK ASSEMBLY, T/R ASSEMBLY FV	1
1589	269A6092-003	BOLT, T/R ASSEMBLY	5
1590	269A6092-003	BOLT, T/R ASSEMBLY	5
1591	269A6094	BUSHING, T/R ASSEMBLY	1
1592	269A6095-003	WASHER	22
1593	269A6095-005	Washer	7
1594	269A6095-005	WASHER, T/R ASSEMBLY	10
1595	269A6095-005	WASHER, T/R ASSEMBLY	4
1596	269A6095-007	WASHER, T/R ASSEMBLY	5
1597	269A6095-007	WASHER, T/R ASSEMBLY	1
1598	269A6095-009	Washer	12
1599	269A6095-009	WASHER, T/R ASSEMBLY	8
1600	269A6095-009	WASHER, T/R ASSEMBLY	8
1601	269A6095-011	Washer	3
1602	269A6101-005	HUB ASSEMBLY, TAIL ROTOR FV	1
1603	269A6101-005	HUB ASSEMBLY, TAIL ROTOR FV	1
1604	269A6102-005	Boot	36
1605	269A6102-009	BOOT, ROTATING - T/R	4
1606	269A6102-009	BOOT, ROTATING - TAIL ROTOR FV	2
1607	269A6103	BOOT FV	1
1608	269A6106	Split Ring	60
1609	269A6106	RING, SPLIT, T/R ASSEMBLY	3
1610	269A6106	RING, SPLIT, T/R ASSEMBLY	1
1611	269A6107	BOOT, INBOARD, T/R	6
1612	269A6107	BOOT, INBOARD, TAIL ROTOR FV	3
1613	269A6107	BOOT, INBOARD, TAIL ROTOR FV	1
1614	269A6109	Stop	2
1615	269A6109	STOP, BLADE, T/R	5
1616	269A6109	STOP, BLADE, TAIL ROTOR FV	2
1617	269A6110-003	STOP, BLADE, T/R	2
1618	269A6110-003	SPACER, TAIL ROTOR FV	1
1619	269A6110-005	SPACER, TAIL ROTOR FV	1

1620	269A6233	Washer	11
1621	269A6233	WASHER, M/R DRIVE SHAFT	3
1622	269A6233	WASHER, M/R DRIVE SHAFT	2
1623	269A6233	WASHER, M/R DRIVE SHAFT	11
1624	269A6233	WASHER, M/R DRIVE SHAFT	49
1625	269A6246	PIN, T/R	5
1626	269A6246	PIN, TAIL ROTOR	2
1627	269A6258	Nut	29
1628	269A6258	NUT, TAIL ROTOR PITCH	14
1629	269A6258	NUT, TAIL ROTOR PITCH	5
1630	269A6260	BEARING, OUTER RACE TEETER	60
1631	269A6260	BEARING, OUTER RACE TEETER FV	5
1632	269A6260	BEARING, OUTER RACE TEETER FV	2
1633	269A6260	BEARING, OUTER RACE TEETER FV	2
1634	269A6261	BEARING, INNER RACE TEETER	61
1635	269A6261	BEARING, INNER RACE TEETER FV	8
1636	269A6261	BEARING, INNER RACE TEETER FV	2
1637	269A7004	Plug	28
1638	269A7004-003	FLIGHT CONTROL INSTL KIT, DUAL FV	1
1639	269A7004-003	FLIGHT CONTROL INSTL KIT, DUAL FV	1
1640	269A7102-005	Link	13
1641	269A7102-005	LINK, CYCLIC PITCH FV	2
1642	269A7114	Spring	27
1643	269A7114	SPRING, CYCLIC PITCH	2
1644	269A7117	Link	33
1645	269A7117	LINK, CYCLIC PITCH FV	1
1646	269A7117	LINK, CYCLIC PITCH FV	1
1647	269A7118	Disc, cyclic Pitch	6
1648	269A7118	DISC, CYCLIC PITCH FV	14
1649	269A7123-007	SOCKET ASSEMBLY FV	1
1650	269A7130-001	Spacer	18
1651	269A7130-002	Spacer	11
1652	269A7130-002	SPACER	2
1653	269A7130-002	SPACER	3
1654	269A7130-003	SPACER	2
1655	269A7130-004	SPACER, CYCLIC TORQUE TUBE	1
1656	269A7130-005	Spacer	3
1657	269A7130-005	SPACER	2
1658	269A7130-005	SPACER	4
1659	269A7130-006	SPACER	1
1660	269A7130-007	Spacer	7
1661	269A7130-007	SPACER	2
1662	269A7130-008	SPACER	1
1663	269A7131	Screw	9
1664	269A7131	SCREW	7
1665	269A7131-003	BOLT	1
1666	269A7134	Trim Actuator12V	1
1667	269A7138-005	WORM, GEAR ASSY, LONGITUDINAL	4
1668	269A7139-003	WORM, GEAR ASSY, LATERAL CONTROL FV	8
1669	269A7139-009	WORM GEAR, LATERAL CONTROL	2
1670	269A7143	Washer	26
1671	269A7143	WASHER, CYCLIC PITCH	6
1672	269A7143	WASHER, CYCLIC PITCH	8
1673	269A7144	SHIM	7

1674	269A7145-007	Motor 12V	1
1675	269A7153	Stud	8
1676	269A7154	Sleeve	3
1677	269A7158-003	STOP, LONGITUDINAL CONTROL FV	4
1678	269A7161	Spring	24
1679	269A7161	SPRING, CYCLIC BUNGEE	1
1680	269A7161	SPRING, CYCLIC BUNGEE	3
1681	269A7162-003	Cover	22
1682	269A7162-003	COVER, LONG BUNGEE SPRING	1
1683	269A7162-003	COVER, LONG BUNGEE SPRING	4
1684	269A7168	Spring	12
1685	269A7168	SPRING, CABIN SEAT ASSEMBLY	1
1686	269A7169	Hosuing	3
1687	269A7171-003	Guide	14
1688	269A7187-003	Spring	16
1689	269A7187-005	Spring	7
1690	269A7192-007	Spacer	1
1691	269A7192-007	SPACER, LONGITUDINAL CONTROL FV	1
1692	269A7194	SHAFT, PINION FV	3
1693	269A7195	BUSHING, LONGITUDINAL CONTROL	3
1694	269A7196-007	Arm, Trim Long	1
1695	269A7198-001	RETAINER, CYCLIC PITCH	2
1696	269A7203	Adapter	28
1697	269A7209	Guard	19
1698	269A7209	GUARD, PITCH CONTROL FV	5
1699	269A7209	GUARD, PITCH CONTROL FV	9
1700	269A7211	Nut	9
1701	269A7212	Shim	77
1702	269A7212-003	SHIM	12
1703	269A7212-003	SHIM	9
1704	269A7212-005	SHIM	5
1705	269A7212-007	SHIM	1
1706	269A7212-007	SHIM	7
1707	269A7212-009	SHIM	9
1708	269A7213	Doubler	27
1709	269A7213-003	Doubler	29
1710	269A7214	Disc	20
1711	269A7214-007	Disc	8
1712	269A7214-007	DISC, COLLECTIVE STICK FV	5
1713	269A7214-007	DISC, COLLECTIVE STICK FV	1
1714	269A7216	Disc	2
1715	269A7216	DISC FV	7
1716	269A7217	Cap	5
1717	269A7217	CAP	1
1718	269A7221	Washer	19
1719	269A7221	WASHER, COLLECTIVE STICK	11
1720	269A7221	WASHER, COLLECTIVE STICK	18
1721	269A7223-003	Gear, Throttle Control	1
1722	269A7226	Pinion, Throttle Control	7
1723	269A7229	Spring	15
1724	269A7229	SPRING, COLLECTIVE PITCH	3
1725	269A7231-009	Handle	11
1726	269A7239-007	Bellcrank	5
1727	269A7240	Pin, Throttle Control	2

1728	269A7240	PIN, THROTTLE CONTROL	2
1729	269A7240	PIN, THROTTLE CONTROL	2
1730	269A7242-005	Bungee Assy	1
1731	269A7245-003	Tube	20
1732	269A7251	Spring	9
1733	269A7251	SPRING, THROTTLE CONTROL	8
1734	269A7261	Grip, Collective Stick	6
1735	269A7262	Throttle Grip	1
1736	269A7266-003	Tube	5
1737	269A7269-003	Torque Tube	10
1738	269A7274-007	Bellcrank	4
1739	269A7275-005	Extension	9
1740	269A7277	Washer	27
1741	269A7277	WASHER, CABIN STICK ASSEMBLY	2
1742	269A7289-003	Tube Assy	18
1743	269A7289-003	TUBE ASSEMBLY FV	1
1744	269A7290	Retainer	21
1745	269A7290	RETAINER	1
1746	269A7291	Fitting	22
1747	269A7291-003	Fitting	28
1748	269A7293	Spring	46
1749	269A7293	SPRING	1
1750	269A7293	SPRING	1
1751	269A7293	SPRING	2
1752	269A7314	GUARD FV	1
1753	269A7315-003	Cable Assy	7
1754	269A7315-003	CABLE ASSEMBLY	2
1755	269A7315-003	CABLE ASSEMBLY FWD FV	2
1756	269A7315-005	CABLE ASSEMBLY	2
1757	269A7315-005	CABLE ASSEMBLY AFT FV	2
1758	269A7316-009	Trim Actuator	6
1759	269A7316-009	Trim Actuator	9
1760	269A7316-013	CONTRL ASSEMBLY, LATERAL FV	3
1761	269A7317-009	CONTROL ASSEMBLY, LONGITUDINAL FV	1
1762	269A7317-011	CONTROL ASSEMBLY, LONGITUDINAL FV	1
1763	269A7317-013	LONGITUDINAL TRIM ASSY	1
1764	269A7317-021	LONGITUDINAL TRIM ASSY	1
1765	269A7318-001	HOUSING FV	2
1766	269A7319-003	HOUSING CYCLIC TRIM CONTROL	2
1767	269A7320-001	Motor Mount	4
1768	269A7323-001	GEAR UNIT ASSEMBLY LONG FV	2
1769	269A7323-001	GEAR UNIT ASSEMBLY LONG FV	1
1770	269A7324-001	Gear Unit Assy	1
1771	269A7324-001	GEAR UNIT ASSEMBLY LAT FV	2
1772	269A7325	Pulley Assy	8
1773	269A7325	PULLEY FV	1
1774	269A7326	Stop	5
1775	269A7333-005	Tube	9
1776	269A7334-006	Socket	2
1777	269A7334-006	SOCKET, RIGHT-HAND, RUDDER PEDAL FV	2
1778	269A7334-007	Socket	4
1779	269A7334-007	SOCKET, LEFT-HAND, RUDDER PEDAL FV	2
1780	269A7336-006	Rudder Pedal, RH	4
1781	269A7336-007	Rudder Pedal, LH	5

1782	269A7337	Spacer	2
1783	269A7338-003	Extension	4
1784	269A7339-003	Cover	2
1785	269A7341-005	Bracket	8
1786	269A7341-006	Bracket	2
1787	269A7345-003	TRIM SERVO ASSEMBLY LATERAL	4
1788	269A7345-005	Trim, Servo Assy	2
1789	269A7345-007	LONG TRIM MOTOR/GEARBOX ASSY 24V	2
1790	269A7360-001	Pedal	4
1791	269A7360-002	Pedal	4
1792	269A7360-007	PEDAL - T/R CONTROL SYSTEM L/H FV	1
1793	269A7360-008	PEDAL - T/R CONTROL SYSTEM R/H FV	1
1794	269A7361-001	Protection, Pedal	20
1795	269A7364	Bushing	4
1796	269A7364-003	BUSHING	8
1797	269A7365-003	T/R PEDAL SHIMS	5
1798	269A7365-005	T/R PEDAL SHIM	2
1799	269A7409-11	Rod Assy	9
1800	269A7409-9	Rod Assy	7
1801	269A7410-005	Rod Assy	2
1802	269A7410-5	Rod Assy	6
1803	269A7412	Rod	1
1804	269A7414	Rod Assy	1
1805	269A7414	ROD ASSEMBLY, CYCLIC CONTROL FV	1
1806	269A7509	BELLCRANK ASSY, IDLER, LONGITUDE	2
1807	269A7510	Idler Arm	4
1808	269A7516	Link Assy	14
1809	269A7517	Bellcrank	2
1810	269A7518	Bellcrank	5
1811	269A7518	BELLCRANK	1
1812	269A7518	BELLCRANK FV	1
1813	269A7518	BELLCRANK FV	1
1814	269A7519	Bellcrank	8
1815	269A7520	Rod Assy	14
1816	269A7521	Idler Assy	6
1817	269A7522	BELLCRANK ASS'Y-COLL. PITCH MIXER	1
1818	269A7523-003	SPACER	2
1819	269A7701-003	Socket	2
1820	269A7707-007	SHAFT ASSEMBLY, COLLECTIVE STICK FV	1
1821	269A7713	SHAFT ASSEMBLY, COLLECTIVE STICK FV	1
1822	269A7720	Rod Assy	2
1823	269A7723-007	Throttle	4
1824	269A7723-011	THROTTLE TUBE ASSY	2
1825	269A7724-003	Tube	1
1826	269A8103	GASKET	2
1827	269A8103	Gasket	26
1828	269A8104	Gasket	28
1829	269A8104	GASKET, CARBURETOR, AIR INLET FV	1
1830	269A8139-011	Duct, Carburetor	2
1831	269A8139-011	DUCT, CARB AIR INL	2
1832	269A8139-011	DUCT, CARB AIR INL	4
1833	269A8139-011	DUCT, CARBURETOR, AIR INLET FV	1
1834	269A8139-011	DUCT, CARBURETOR, AIR INLET FV	1
1835	269A8139-013	DUCT, CARBURETOR, AIR INLET FV	1

1836	269A8139-015	Duct, Carburator	2
1837	269A8139-015	DUCT, CARB AIR INL	9
1838	269A8139-017	DUCT, CARB AIR INL	8
1839	269A8139-017	DUCT, CARBURETOR, AIR INLET FV	1
1840	269A8143-009L	Housing, Carburator	2
1841	269A8150-003	SEAL FV	2
1842	269A8150-005	SEAL, FAIRING ASSEMBLY FV	4
1843	269A8150-007	Seal, Carburator	6
1844	269A8150-007	SEAL, CARBURETOR AIR COVER	2
1845	269A8150-007	SEAL, CARBURETOR AIR COVER FV	3
1846	269A8151	SUPPORT ASSY	1
1847	269A8157	COVER ASSY FV	1
1848	269A8157L	Cover	12
1849	269A8174-5	Duct, Carburetor	1
1850	269A8205-061	MANIFOLD FV	1
1851	269A8206-061	MANIFOLD, EXHAUST FV	1
1852	269A8207-003	Flange	40
1853	269A8207-003	FLANGE ADAPTER EXH MANIF	3
1854	269A8207-003	FLANGE ADAPTER EXH MANIF	8
1855	269A8207-003	FLANGE ADAPTER EXH MANIF	9
1856	269A8208-003	BRACKET, SCROLL ASSEMBLY FV	1
1857	269A8219	Clamp	22
1858	269A8219	CLAMP	4
1859	269A8219	CLAMP FV	3
1860	269A8223	HANGER ASSY	2
1861	269A8223-007	HANGER ASSY	3
1862	269A8224-003	Deflector, Exhaust	4
1863	269A8224-005	Clip	4
1864	269A8224-005	CLIP	8
1865	269A8225-003	SEAL EXHAUST	26
1866	269A8225-003	SEAL, EXHAUST FV	5
1867	269A8238	Collector	6
1868	269A8241-003	MUFFLER COLLECTOR FV	1
1869	269A8242	Tube Assy	1
1870	269A8249	Clamp	1
1871	269A8250	Clamp	1
1872	269A8261-001	PIPE-EXHAUST, ONE PIECE FV	1
1873	269A8307	REDUCER	1
1874	269A8307	REDUCER	5
1875	269A8308	Fitting	3
1876	269A8308	FITTING	1
1877	269A8308-003	FITTING	1
1878	269A8309-003	CLIP, STATIC PRESSURE	11
1879	269A8309-005	COVER, STATIC PRESSURE	1
1880	269A8309-011	Plug	7
1881	269A8310	FITTING, PLUMBING, AFT	8
1882	269A8313-007	Fuel Strainer	4
1883	269A8313-007L	STRAINER, FUEL FV	1
1884	269A8323	GASKET, FUEL TANK	80
1885	269A8326-015	TUBE ASSEMBLY, ENGINE BREATHER FV	1
1886	269A8326-023	TUBE ASSY, MANIFOLD PRESSURE	4
1887	269A8326-095	Tube Assy, Fuel Pump	3
1888	269A8326-099	TUBE ASSEMBLY, FUEL BOOST PUMP	1
1889	269A8326-107	Tube Assy	12

1890	269A8326-137	TUBE, ASSY INSTR	1
1891	269A8326-207	Tube Assy	11
1892	269A8326-211	Tube	5
1893	269A8326-215T	TUBE ASSEMBLY, FUEL SYSTEM FV	1
1894	269A8326-215T	TUBE ASSEMBLY, FUEL SYSTEM FV	1
1895	269A8326-235	TUBE ASSY, FUEL SYSTEM	1
1896	269A8326-235	TUBE ASSEMBLY, FUEL SYSTEM FV	2
1897	269A8327-015	TUBE ASSEMBLY, LUBE SYSTEM FV	1
1898	269A8327-019	Hose	2
1899	269A8327-019	HOSE FV	5
1900	269A8327-019	HOSE FV	7
1901	269A8327-023	TUBE ASSEMBLY, MANIFOLD PRESSURE FV	1
1902	269A8327-025	HOSE ASSEMBLY FV	1
1903	269A8327-059	HOUSE ASSY SUMP DRAIN	2
1904	269A8327-067	TUBE ASSY, FUEL SYSTEM	2
1905	269A8327-087	TUBE ASSY, FUEL SYSTEM	2
1906	269A8327-087	TUBE ASSEMBLY, FUEL SYSTEM FV	1
1907	269A8327-131	TUBE ASSY, LUBE SYSTEM	2
1908	269A8327-143	TUBE ASSEMBLY, LUBE SYSTEM FV	2
1909	269A8327-147	TUBE ASSY, FUEL PRESSURE	2
1910	269A8327-147	TUBE ASSEMBLY, FUEL PRESSURE FV	2
1911	269A8327-155	TUBE ASSY	2
1912	269A8327-155	TUBE ASSY	1
1913	269A8327-249	COOLER TO COOLER-TOPLINE	1
1914	269A8327-315	HOSE ASSY FV	1
1915	269A8328-015	Tube Assy	1
1916	269A8328-015	TUBE ASSY, MANIFOLD PRESSURE	2
1917	269A8328-017	TUBA ASSY, PITOT	2
1918	269A8328-019	Tube Assy	9
1919	269A8328-019	TUBE ASSY, AIRSPEED	2
1920	269A8328-019	TUBE ASSEMBLY, AIRSPEED, STATIC FV	1
1921	269A8328-021	Tube Assy	2
1922	269A8328-021	TUBE, AIRSPEED, STATIC	2
1923	269A8328-045	TUBE ASSEMBLY, AIRSPEED, STATIC	2
1924	269A8329-015	Strap Assy	4
1925	269A8329-015	STRAP ASSEMBLY, MAIN TANK FV	1
1926	269A8329-027	STRAP ASSEMBLY, FUEL TANK	1
1927	269A8329-027	STRAP ASSEMBLY, FUEL TANK FV	1
1928	269A8330-011	Pad	1
1929	269A8330-015	PAD, FUEL TANK STRAP	8
1930	269A8337	Gasket	8
1931	269A8337	GASKET	9
1932	269A8337	GASKET, FUEL TANK FV	2
1933	269A8337	GASKET, FUEL TANK FV	2
1934	269A8350	Pad, Main Tank	3
1935	269A8367-015	OUTLET AND STRAINER FV	2
1936	269A8367-019	Strainer	13
1937	269A8367-019	OUTLET AND STRAINER FV	3
1938	269A8368	Union, Fuel Tanks	7
1939	269A8369	Gasket, Fuel Tank	7
1940	269A8369	GASKET	3
1941	269A8372-801	STRAP SUBASSEMBLY, LOWER FV	2
1942	269A8372-802	STRAP SUBASSEMBLY, UPPER FV	1
1943	269A8376-002	FIREWALL ASSY, AUXILIARY FUEL	3

1944	269A8378-019	TUBE ASSEMBLY, AUXILIARY FUEL TANK FV	1
1945	269A8379-013	HOSE ASSEMBLY, AUXILIARY FUEL TANK FV	1
1946	269A8379-015	HOSE ASSEMBLY, AUXILIARY FUEL TANK FV	1
1947	269A8379-019	HOSE ASSEMBLY, AUXILIARY FUEL	1
1948	269A8379-025	HOSE ASSEMBLY, AUXILIARY FUEL	4
1949	269A8383-003	DECAL-AUX. FUEL TANK	2
1950	269A8383-005	DECAL, "FUEL GRADE 100/130" 18	4
1951	269A8385-007	DECAL-CAL.AUX FUEL TANK	1
1952	269A8385-009	Decal	6
1953	269A8385-009	DECAL, "AUX FUEL QUANTITY" 49	2
1954	269A8385-011	Decal	3
1955	269A8385-011	DECAL, "AUX FUEL QUANTITY" 49 GAL	6
1956	269A8418-821	BUSHING	2
1957	269A8426	BRACKET, THROTTLE	1
1958	269A8428	Adapter	7
1959	269A8430	Bracket	12
1960	269A8437	Bushing, Throttle	18
1961	269A8437	BUSHING, THROTTLE	13
1962	269A8441	LINK ASSY	1
1963	269A8442-002	Arm	2
1964	269A8442-002	ARM FV	1
1965	269A8445	Bushing	6
1966	269A8445-003	BUSHING, THROTTLE CONTROL	1
1967	269A8449	WASHER, THROTTLE	5
1968	269A8451	BRACKET	5
1969	269A8507-015	Panel	1
1970	269A8507-017	PANEL ASSEMBLY ENGINE LEFT-HAND	3
1971	269A8507-017	PANEL ASSEMBLY, ENGINE, LEFT-HAND FV	1
1972	269A8508-031	PANEL ASSEMBLY, ENGINE	2
1973	269A8508-031	PANEL ASSEMBLY, ENGINE FV	1
1974	269A8511-031	Panel	1
1975	269A8511-031	PANEL ASSY, ENGINE	2
1976	269A8511-031	PANEL ASSEMBLY, ENGINE FV	1
1977	269A8512-013	Panel	4
1978	269A8512-013	PANEL;ASSY, ENGINE	3
1979	269A8512-013	PANEL, ENGINE FV	1
1980	269A8513-027	PANEL ASSEMBLY FV	1
1981	269A8513-027L	PANEL, ENGINE	2
1982	269A8515-019	PANEL, ENGINE	1
1983	269A8516	Tube Assy	19
1984	269A8516	TUBE ASSEMBLY	3
1985	269A8517-800	1.00 DIA SCAT DUCT (BLAST TUBE)	3
1986	269A8517-800	1.00 DIA SCAT DUCT (BLAST TUBE) FV	1
1987	269A8520-005	DEFLECTOR ASSEMBLY	3
1988	269A8520-007	DEFLECTOR ASSEMBLY	4
1989	269A8520-013	Panel	1
1990	269A8527	IMPELLER ASSEMBLY, FLYWHEEL FV	1
1991	269A8527	IMPELLER ASSEMBLY, FLYWHEEL FV	1
1992	269A8532	Marker	1
1993	269A8532	MARKER	1
1994	269A8532	MARKER FV	1
1995	269A8536	Plug	10
1996	269A8536	PLUG	2
1997	269A8536	PLUG FV	6

1998	269A8543	Cover Assy	4
1999	269A8543	COVER ASSEMBLY, ACCESS	2
2000	269A8545	PANEL ASSY	1
2001	269A8545-011	PANEL ASSY COOLING SHROUD LH	1
2002	269A8554-003	SEAL, RUBBER	2
2003	269A8554-003	SEAL, RUBBER FV	9
2004	269A8554-003	SEAL, RUBBER FV	1
2005	269A8555-003	ROD, LH ENGINE COOLING SHROUD	6
2006	269A8555-005	ROD, RH ENGINE COOLING SHROUD	6
2007	269A8556	SPACER	7
2008	269A8556-003	Spacer, Rod LH	4
2009	269A8556-003L	SPACER TUBE RIGHT HAND	4
2010	269A8556-005	Spacer, Tube LH	2
2011	269A8556-005L	SPACER TUBE RH	8
2012	269A8566-013	Bracket, Angle	2
2013	269A8569	Ring, Oil Cooler	10
2014	269A8569	RING, OIL COOLER FV	8
2015	269A8575-015	DUCT ASSY	5
2016	269A8575-017	DUCT SUB ASSY FV	2
2017	269A8576	Mounting Ring	3
2018	269A8576	MOUNTING RING FV	9
2019	269A8579-005	BRACKET	2
2020	269A8591-001	PANEL ASSY, ENGINE SHROUD	1
2021	269A8591-023	PANEL ASSY	1
2022	269A8592-001	PANEL ASSY, ENGINE SHROUD	2
2023	269A8592-015	PANEL ASSY	1
2024	269A8593-003	Cover	1
2025	269A8593-003	ACCESS COVER ASSEMBLY	2
2026	269A8593-005	Cover	3
2027	269A8593-005	ACCESS COVER FITTING	2
2028	269A8595	Fitting	6
2029	269A8595	FITTING	2
2030	269A8595	FITTING	9
2031	269A8595	BRACKET ASSEMBLY FV	1
2032	269A8595	BRACKET ASSEMBLY FV	1
2033	269A8595-005	BRACKET ASSEMBLY FV	25
2034	269A8596	BRACKET ASSEMBLY	11
2035	269A8596	BRACKET ASSEMBLY FV	6
2036	269A8596	BRACKET ASSEMBLY FV	1
2037	269A8597	Bracket, RH	3
2038	269A8597	BRACKET, RIGHT-HAND	10
2039	269A8597	BRACKET, RIGHT-HAND FV	1
2040	269A8597-007	Bracket, RH	8
2041	269A8597-007	BRACKET, LEFT-HAND	11
2042	269A8597-007	BRACKET, LEFT-HAND FV	4
2043	269A8598	SUPPORT	3
2044	269A8598	BRACKET FV	1
2045	269A8603	Washer	75
2046	269A8603	WASHER	10
2047	269A8605	ABSORBER, INNER	14
2048	269A8605	ABSORBER, INNER FV	30
2049	269A8606	ABSORBER	9
2050	269A8606	ABSORBER FV	27
2051	269A8610	BUSHING, ENGINE SUPPORT	4

2052	269A8610	BUSHING, ENGINE SUPPORT FV	32
2053	269A8611	Spacer	3
2054	269A8611	SPACER	4
2055	269A8614	Rod	19
2056	269A8614	ROD, ENGINE MOUNT	4
2057	269A8614	ROD, ENGINE MOUNT	3
2058	269A8615	Washer	8
2059	269A8615	WASHER, FORWARD ENGINE SUPPORT	6
2060	269A8615	WASHER, FORWARD ENGINE SUPPORT	4
2061	269A8615	WASHER, FORWARD ENGINE SUPPORT	3
2062	269A8616	Spacer	7
2063	269A8616	SPACER	1
2064	269A8616	SPACER	8
2065	269A8617	HANGER ASSEMBLY FV	2
2066	269A8617	HANGER ASSEMBLY FV	2
2067	269A8617	HANGER ASSEMBLY FV	1
2068	269A8618	HANGER ASSEMBLY FV	2
2069	269A8618	HANGER ASSEMBLY FV	2
2070	269A8618	HANGER ASSEMBLY FV	1
2071	269A8630	MOUNTING	1
2072	269A8802	Support Assy	2
2073	269A8803	BAND, MUFFLER	1
2074	269A8803	BAND, MUFFLER	2
2075	269A8803	BAND, MUFFLER	1
2076	269A8806	Cable Assy	1
2077	269A8806	CABLE ASSEMBLY, MUFFLER	3
2078	269A8806	CABLE ASSEMBLY, MUFFLER FV	1
2079	269A8806	CABLE ASSEMBLY, MUFFLER FV	1
2080	269A8807	Strap Muffler	3
2081	269A8807-003	Strap Muffler	1
2082	269A8807-005	Strap Muffler	13
2083	269A8810-015	BAFFLE ADAPTER FV	1
2084	269A9206	Wrench Adapter	2
2085	269A9248	Bushing	1
2086	269A9249	Bushing	11
2087	269A9249	GAUGE, CRUSH	5
2088	269A9300	Tool, LWR Pulley	2
2089	269A9406-819	FIRESHIELD ASSY-R/H FUEL TANK	1
2090	269A9410-001	FUEL QUANTITY PROBE ASS'Y	2
2091	269A9410-005	LOW FUEL WARN PROBE/SENDER	1
2092	269A9410-015	LOW WARNING FUEL PROBE	1
2093	269A9884-003	DOUBLER	1
2094	269A9900-003T	SEAT ASSEMBLY, CABIN	1
2095	269A9927	FIREWALL ASSY, MAIN FUEL TANK	3
2096	269A9928-007	BRACKET, RETROFIT, CABIN SEAT ASSY FV	1
2097	269A9931	Torque Tube	2
2098	269A9937-003	TUBE, TORQUE TUBE FV	1
2099	269A9937-005	COLLAR, TORQUE TUBE	2
2100	269A9940-007	Rod Assy	8
2101	269A9940-007	ROD ASSEMBLY, FLIGHT CONTROL FV	1
2102	269A9941	Rod Assy	6
2103	269A9941	ROD ASSEMBLY, CYCLIC PITCH FV	1
2104	269A9941	ROD ASSEMBLY, CYCLIC PITCH FV	1
2105	269A9942	Rod Assy	6

2106	269A9943	Rod Assy	8
2107	269A9951	Torque Tube	9
2108	269A9961	Pinion	4
2109	269A9975-005	Gasket	33
2110	269A9975-005	GASKET, FUEL TANK	3
2111	269A9975-005	GASKET, FUEL TANK FV	1
2112	269A9977-009	CAP, SUMP, MAIN FUEL TANK FV	1
2113	269A9980	ROD ASSEMBLY FV	2
2114	269A9980	ROD ASSEMBLY FV	3
2115	269A9986-003	Guide, Friction	20
2116	269A9986-003	GUIDE, FRICTION, CABIN SUBASSEMBLY FV	1
2117	269A9988	Cover Plate	1
2118	269A9989-001	Tube	41
2119	269A9989-001	TUBE, CYCLIC CONTROL STOP	3
2120	269A9989-001	TUBE, CYCLIC CONTROL STOP	3
2121	269D2117-026	ANGLE FV	2
2122	269D2117-824	CHANNEL FV	2
2123	269D3114-001	BELLOW FV	1
2124	269D5308-001	SHAFT & ASSY - M/R DRIVE SPLINED FV	1
2125	269D5312-007	COLLET - M/R HUB & SHAFT FV	1
2126	269D5312-009	COLLET SET - M/R HUB & SHAFT FV	1
2127	269D5314-005	WASHER-MAIN ROTOR DRIVE, SPLINED FV	1
2128	269D6065-001	N1 PERCENT RPM TACH INDICATOR FV	1
2129	269D6067-001	TOT INDICATOR FV	1
2130	269D8278-011	SPRING EXTENSION	2
2131	269D8306-103	LONG TRIM UNIT FV	1
2132	269D8504-003	BOOT-CONTROL ROD	1
2133	269D9292-001	LIFT EYE (OPTIONAL) FV	2
2134	269DA-100-1	DOOR OPENER L/H	3
2135	269DA-100-2	DOOR OPENER R/H	2
2136	269DA-100-3	DOOR OPENER	12
2137	269DA-100-4	DOOR OPENER	2
2138	269M10008-3	SHIM	2
2139	269M10119-003	INSTRUMENT CLUSTER, MOD KIT, 28-V	2
2140	269M10119-5	INSTR PANEL MOD, INSTR CLUSTER FV	1
2141	269M10119-9	DOUBLER, INSTR CLUSTER MOD KITS FV	4
2142	26S51-11	STUD	8
2143	26S51-5	STUD	6
2144	2N6469	TRANSISTOR	6
2145	2N6469	TRANSISTOR	2
2146	3-907-47-071	PACKING FV	11
2147	3060-00018	SENDER FV	1
2148	3060-00020	SENDER FV	1
2149	3080-00037	SENDER FV	1
2150	3080-00038	SENDER FV	3
2151	3080-00038	SENDER FV	1
2152	31C-12	STUD	13
2153	31C-12	STUD	10
2154	33-199-36	CLIP	2
2155	33-199-915	FILTER SCREEN FV	8
2156	33-199-915	FILTER SCREEN FV	6
2157	369A1706-507	STRAP ASSY FV	2
2158	383-B	NUT	13
2159	4-37-3	CONNECTOR	2

2160	4-37-7	ELBOW	3
2161	4-37-7	ELBOW	3
2162	40-59	GEAR FV	1
2163	40-86	GEAR FV	1
2164	42B5008-001	V-BELT SET - BANDED	1
2165	42FW624	NUT	6
2166	4615-1250-1062-17	(MOLDED SEAL FV	20
2167	4KS4-832-80	INSERT	8
2168	4SA5	ELBOW	1
2169	4V6X-S	ELBOW 45	2
2170	504-3052	END CAP	1
2171	5100-25	SNAP RING	5
2172	52-018-078-0250	PIN	26
2173	52-018-078-0437	ROLL PIN	7
2174	52-018-078-0437	ROLL PIN	1
2175	586-15	RELAY	4
2176	6-4TRTXS	REDUCER	1
2177	6246-00189	AMMETER FV	1
2178	6246-00282	FUEL QUANTITY FV	3
2179	6246-00283	FUEL PRESSURE FV	1
2180	6246-00284	CYLINDER HEAD TEMP FV	2
2181	6246-00285	OIL PRESSURE FV	1
2182	6246-00501	FUEL QUANTITY FV	1
2183	637X104	BALL JOINT FV	2
2184	63X991	SEAL FV	4
2185	71X5239	SEAL FV	3
2186	7692K13	SWITCH	2
2187	7JX2105	CAPACITOR	1
2188	8-S6X-D	TEE	2
2189	800-015-10	SEAL FV	1
2190	800-015-10	SEAL FV	2
2191	90810A030	HEX-NUT 5/16-18 MONEL	13
2192	99-269A2320	TAILBOOM FV	1
2193	A-790-60	MIXTURE CABLE FV	1
2194	A218-100646-03	SWITCH, 4-WAY , TRIM	1
2195	A218-158698-05	TRIGGER SWITCH	1
2196	A3-20	STUD	134
2197	A555A-V-28	TAIL LIGHT FV	1
2198	A8189	BOLT, AIRVENT	2
2199	ADB-159	ADJUSTABLE DIAMETER BOLT	1
2200	AGC-5	FUSE FV	2
2201	AGC-5	FUSE FV	1
2202	B5590	WINDOW FV	6
2203	BA5405	ELEMENT, FILTER AIR FV	13
2204	BA5405	ELEMENT, FILTER AIR FV	1
2205	BEPBA07RLP	INDICATOR LIGHT RED	2
2206	BL8-5	RIVET	21
2207	BLS4BA16S	PIN	1
2208	C10X-40SS	CLAMP CHAN-STRAP FV	1
2209	C10X-40SS	CLAMP CHAN-STRAP FV	1
2210	C10Y-40-12C	CLAMP FV	1
2211	C10Y-40-12C	CLAMP FV	1
2212	CR2249-4-1	RIVET	112
2213	CR2249-4-3	RIVET	38

2214	CR2249-5-6	RIVET	51
2215	CR2249-5-7	RIVET	80
2216	CR2545-4-2	RIVET	32
2217	CR3687	OIL SEAL FV	9
2218	D1119	GEAR FV	9
2219	D2228/51-20007	SCREEN FV	41
2220	D3520-2	RPM Limiter	2
2221	DL1020M81C	ACTUATOR 12V FV	1
2222	FF303-3	BEARING FV	5
2223	FF310-3	BEARING FV	6
2224	FN22M624	NUT	2
2225	G199-105-4D	STRAINER FV	1
2226	GH3	GROMMET	6
2227	HL19PB6-7	PIN	5
2228	HL19PB6-8	PIN	25
2229	HL20PB-10-8	PIN	18
2230	HL20PB10-7	PIN	24
2231	HL20PB87-10-8	PIN & COLLAR	3
2232	HL82-6A	COLLAR	27
2233	HL82-6PBW	WASHER	28
2234	HL96-10	COLLAR	4
2235	HL96-6	COLLAR	15
2236	HM4M	BEARING	2
2237	HPAGC-2	FUSE FV	3
2238	HS12-5-028-012	BUSHING	1
2239	HS13C315R250-21C	BUSHING	5
2240	HS13D248-194-171H	BUSHING	5
2241	HS13SP311R-190-1	BUSHING	4
2242	HS13SP498-378-18	BUSHING	2
2243	HS13SP625-377-33	BUSHING	1
2244	HS1446-10-68	BOLT	23
2245	HS1446-10-68	BOLT	1
2246	HS1551S290	WASHER	14
2247	HS1551S290	WASHER	8
2248	HS1551S290	WASHER	2
2249	HS306-225H	WASHER	6
2250	HS306-227	WASHER	8
2251	HS306-228H	WASHER	16
2252	HS306-231H	WASHER	7
2253	HS306-326H	WASHER	7
2254	HS306-327	WASHER	19
2255	HS306-327H	WASHER	8
2256	HS306-527H	WASHER	26
2257	HS306-527H	WASHER	8
2258	HS3190B8	PACKING FV	2
2259	HS4057-9	BOLT	2
2260	HS4727-3-0	SCREW	1
2261	HS610C6244R375X	BUSHING	4
2262	HS626-3-320	BUSHING, SLOTTED	1
2263	HS626-4-240	BUSHING, SLOTTED	5
2264	HS626-4-247	BUSHING, SLOTTED	6
2265	HS626-4-250	BUSHING, SLOTTED	46
2266	HS626-4-260	BUSHING, SLOTTED	10
2267	HS626-4-343	BUSHING, SLOTTED	2

2268	HS626-4-350	BUSHING, SLOTTED	3
2269	HS626-4-360	BUSHING, SLOTTED	9
2270	HS626-4-367	BUSHING, SLOTTED	7
2271	HS626-4-375	BUSHING, SLOTTED	2
2272	HS626-4-400	BUSHING, SLOTTED	1
2273	HS626-4-450	BUSHING, SLOTTED	6
2274	HS626-5-320	BUSHING, SLOTTED	5
2275	HS626-5-360	BUSHING, SLOTTED	4
2276	HS626-5-375	BUSHING, SLOTTED	3
2277	HS626-S-4-488	BUSHING, SLOTTED	2
2278	HS626-S-5-210	BUSHING, SLOTTED	5
2279	HS626-S-5-210	BUSHING, SLOTTED	6
2280	HS626-S-5-390	BUSHING, SLOTTED	8
2281	JV-7	MICROSWITCH ACTUATOR	8
2282	K2250B-L-2	FUEL STRAINER SYSTEM FV	2
2283	KN1032FSY	INSERT	9
2284	KN428FSY	INSERT	9
2285	LP501-10-4	SCREW	5
2286	LP501-10-4	SCREW	14
2287	LWB-22-D6-22	BOLT	2
2288	M10016-5	BRACKET	8
2289	M10016-7	BRACKET	6
2290	M10P-LS-H19C	WINCHESTER PLUG	1
2291	M10S-LS-H19C	WINCHESTER CONNECTOR	2
2292	MDL-15	BUSS FUSE FV	3
2293	MS14104-7	BEARING	1
2294	MS15002-1	GREASE FITTING	23
2295	MS15002-1	GREASE FITTING	9
2296	MS16562-14	ROLL PIN	20
2297	MS16562-213	PIN	1
2298	MS16625-1145	RING	5
2299	MS21251B3L	TURNBUCKLE	3
2300	MS21251B3S	TURNBUCKLE	1
2301	MS21254-3LL	EYE	4
2302	MS21256-1	LOCK CLIP	41
2303	MS21256-1	LOCK CLIP	141
2304	MS21256-2	LOCK CLIP	46
2305	MS21256-2	LOCK CLIP	34
2306	MS21919DG14	CLAMP	3
2307	N02	NUT	2
2308	N02	NUT	1
2309	OS75-28	RELAY OVERVOLTAGE	4
2310	OS75-28	RELAY OVERVOLTAGE	1
2311	OSR10C	RIVET	10
2312	P/N	Text	Bestand
2313	PC51542	PLUG FV	8
2314	PC51542	PLUG FV	1
2315	RD206SB8	INSERT	1
2316	RLRR33SB9	LOCK RING	20
2317	RM12LHA797-048	NUT PLATE	21
2318	RM52LHA4972-5-3	NUT PLATE	30
2319	RM52LHA4972-5-62	NUT PLATE	5
2320	RM52LHA4972-6-02	NUT PLATE	15
2321	RR268	RING	9

2322	RS131C	RING	10
2323	RSN118	SNAP RING	5
2324	S10K80	RIVNUT	5
2325	S11065-10-5	RING FV	34
2326	S11065-14-5	RING FV	1
2327	S13050-3019	BACK UP RING FV	2
2328	S3-150	SPRING	49
2329	S34851-215 BAE99	HAT SEAL FV	30
2330	S53HK	PLUG, T/R TRANSMISSION FV	1
2331	S6370CESCS4-12	SCREW	4
2332	S6370CESCS4-12	SCREW	27
2333	S6370CESES4-12	SCREW	4
2334	SA-269K-001-9	HEAVY DUTY SKID SHOE INSTL KIT FV	1
2335	SA-269K-056-1	TAIL ROTOR RIVET KIT / TWO BLADES	1
2336	SA-269K-082-01	TAIL ROTOR TRANSMISSION OVERHAUL KIT FV	2
2337	SA-269K-095-01	DIP STICK ASSEMBLY INSTALLATION KIT FV	1
2338	SA-269K-118	LED LAMP KIT	6
2339	SAEW12	WASHER	11
2340	SAZ4401	RELAY, 24-VOLT STARTER	2
2341	SF107-10SN13A	STUD	19
2342	SFSW10F14DG01W	SCREW	22
2343	SHS12-2-020-240	SPACER	2
2344	SHS12-4-030-023	BUSHING	2
2345	SHS13C248-194-17	BUSHING	4
2346	SHS13SP312-250-1	BUSHING	4
2347	SHS13SP498-378-1	BUSHING	1
2348	SHS1550-325	NUT	1
2349	SHS306-137L	WASHER	30
2350	SHS306-137L	WASHER	3
2351	SHS306-224H	WASHER	4
2352	SHS306-227H	WASHER	5
2353	SHS306-227L	WASHER	4
2354	SHS626-4-400	BUSHING-SLOTTED	1
2355	SHS626-5-560	BUSHING-SLOTTED	3
2356	SHS626-S-4-456	BUSHING-SLOTTED	1
2357	SL60N9F	LOCK NUT	3
2358	SL61N12F	LOCK NUT	6
2359	SL61N12F	LOCK NUT	4
2360	SL61N6F	NUT	1
2361	SL61N6F	NUT	20
2362	SL61N8FSP4	LOCK NUT	18
2363	SL61N8FSP4	LOCK NUT	1
2364	SL61N9F	LOCKNUT	1
2365	SL61W12F	WASHER	12
2366	SL61W12F	WASHER	2
2367	SL61W6F	WASHER	4
2368	SL61W6F	WASHER	8
2369	SPS79325-428	NUT	7
2370	SPS79325-428	NUT	1
2371	STD10195-003	SWIVEL ASSEMBLY	2
2372	STD10962-007	TERMINAL	10
2373	SW6	WASHER FV	3
2374	U250-0145	WASHER	2
2375	V47ZA7	VARISTOR	5

2376	VSF7203S	REGULATOR, 12-VOLT	2
2377	VSF7403S	REGULATOR, 24-VOLT	1
2378	VSF7403S	REGULATOR, 24-VOLT	1
2379	W-02	LOCK WASHER	22